


CYBEX GmbH

Riedinger Str. 18 | 95448 Bayreuth | Germany

info@cybex-online.com www.cybex-online.com www.facebook.com/cybex.online



GO TO WWW.CYBEX-ONLINE.COM
TO WATCH AN INSTRUCTIONAL VIDEO

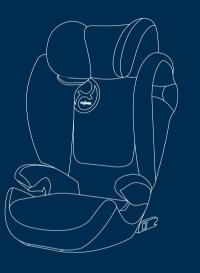

CYBEX SOLUTION M-FIX ECE R44/04, Gr. 2–3 | 15-36 kg



CYBEX PALLAS M-FIX ECE R44/04, Gr. 1 | 9-18 kg


@cybex



EN - Brief instructions Group 1 (9-18 kg) | RU - Brief instructions Group 1 (9-18 kg) | UA - Brief instructions Group 1 (9-18 kg)

EE - Brief instructions Group 1 (9-18 kg) | LV - Brief instructions Group 1 (9-18 kg) | LT - Brief instructions Group 1 (9-18 kg)

TR - Brief instructions Group 1 (9-18 kg)

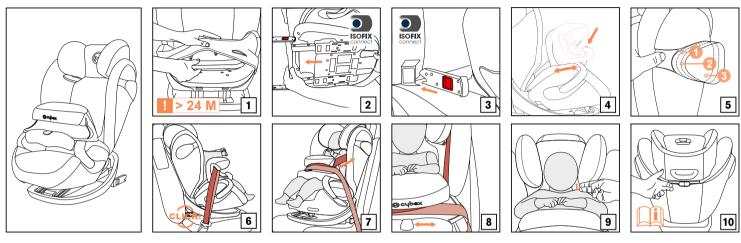

WARNING! Without the approval of the certification office, the child seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child seat no longer being guaranteed.

WARNING! The child seat only offers optimum protection for your child if you follow the usage instructions precisely.

WARNING! Without the approval of the certification office, the child seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child seat no longer being guaranteed.

WARNING! The child seat only offers optimum protection for your child if you follow the usage instructions precisely.

WARNING! Without the approval of the certification office, the child seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child seat no longer being guaranteed.

WARNING! The child seat only offers optimum protection for your child if you follow the usage instructions precisely.

WARNING! Without the approval of the certification office, the child seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child seat no longer being guaranteed.


WARNING! The child seat only offers optimum protection for your child if you follow the usage instructions precisely.

EE

EN - Brief instructions Group 2/3 (15-36 kg) | RU - Brief instructions Group 2/3 (15-36 kg) | UA - Brief instructions Group 2/3 (15-36 kg)

EE - Brief instructions Group 2/3 (15-36 kg) | LV - Brief instructions Group 2/3 (15-36 kg) | LT - Brief instructions Group 2/3 (15-36 kg)

TR - Brief instructions Group 2/3 (15-36 kg)

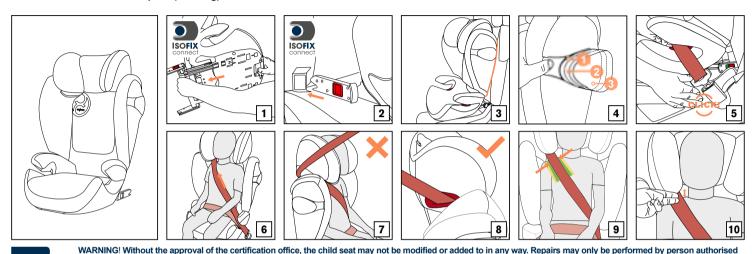

LV

to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child seat no longer being guaranteed.

WARNING! The child seat only offers optimum protection for your child if you follow the usage instructions precisely.

LT

WARNING! Without the approval of the certification office, the child seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child seat no longer being guaranteed.

WARNING! The child seat only offers optimum protection for your child if you follow the usage instructions precisely.

TR

WARNING! Without the approval of the certification office, the child seat may not be modified or added to in any way. Repairs may only be performed by person authorised to this effect. Only original parts and accessories may be used for repairs. Failure to comply with the above will result in the protective function of the child seat no longer being guaranteed.

WARNING! The child seat only offers optimum protection for your child if you follow the usage instructions precisely.



Dear customer,

Thank you for choosing the CYBEX Pallas M-fix child seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX Pallas M-fix child seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX Pallas M-fix child seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX Pallas M-fix child seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX Pallas M-fix child seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX Pallas M-fix child seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.





Approval

Cvbex PALLAS M-fix

Seat elevator with back rest and head rest on an adjustable base frame with height-adjustable safety cushions

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard

ECE R-44/04,

CYBEX PALLAS M-fix - group 1, 9 to 18 kg CYBEX SOLUTION M-fix - group 2/3, 15 to 36 kg

Approval

Cybex PALLAS M-fix

Seat elevator with back rest and head rest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard ECE R-44/04.

CYBEX PALLAS M-fix - group 1, 9 to 18 kg CYBEX SOLUTION M-fix - group 2/3, 15 to 36 kg

Approval

Cybex PALLAS M-fix

Seat elevator with back rest and head rest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard ECE R-44/04,

CYBEX PALLAS M-fix - group 1, 9 to 18 kg CYBEX SOLUTION M-fix - group 2/3, 15 to 36 kg

EN

Contents

Warning! To ensure optimum protection for your child, the CYBEX PALLAS M-fix must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the back rest).

Note! Country-specific regulations (e.g. regarding colour-coding on child seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg)	2
Brief instructions Group 2/3 (15-36 kg)	3
Approval	6
Positioning the seat correctly in the vehicle	8
Securing the child seat using the ISOFIX CONNECT system	10
Activating the L.S.P	12
Removal of the CYBEX PALLAS M-fix	12
Placing the seat in the vehicle	14
Adapting to body size	16
Removing the additional seat insert	16
Adjusting the safety cushion – ECE group 1 (9-18 kg)	16
Seated and lying position – ECE group 1 (9-18 kg)	18
nclinable head rest	18
Strapping in using the safety cushion – ECE group 1 (9-18 kg)	20
Switching from Pallas M-fix to Solution M-fix (ECE group 1 to ECE group 2/3)	20
Strapping in without the safety cushion – ECE group 2/3 (15-36 kg)	22
s your child correctly secured?	24
Care & maintenance	26
Removing the seat cover	26
Removing the cover from the headrest flap	26
Removing the cover from the head support	26
Removing the cover from the shoulder part	28
Removing the cover from the seat surface	28
Removing the cover from the safety cushion	28
Cleaning	28
How to act following an accident	30
Product service life	30
Disposal	30
Varranty conditions	32

Contents

UA

Contents

Warning! To ensure optimum protection for your child, the CYBEX PALLAS M-fix must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the back rest).

Note! Country-specific regulations (e.g. regarding colour-coding on child seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.


Brief instructions Group 1 (9-18 kg)	2
Brief instructions Group 2/3 (15-36 kg)	3
Approval	6
Positioning the seat correctly in the vehicle	9
Securing the child seat using the ISOFIX CONNECT system	11
Activating the L.S.P.	13
Removal of the CYBEX PALLAS M-fix	
Placing the seat in the vehicle	15
Adapting to body size	17
Removing the additional seat insert	17
Adjusting the safety cushion – ECE group 1 (9-18 kg)	17
Seated and lying position – ECE group 1 (9-18 kg)	19
Inclinable head rest	19
Strapping in using the safety cushion – ECE group 1 (9-18 kg)	21
Switching from Pallas M-fix to Solution M-fix (ECE group 1 to ECE group 2/3)	21
Strapping in without the safety cushion - ECE group 2/3 (15-36 kg)	23
Is your child correctly secured?	25
Care & maintenance	27
Removing the seat cover	27
Removing the cover from the headrest flap	27
Removing the cover from the head support	27
Removing the cover from the shoulder part	29
Removing the cover from the seat surface	29
Removing the cover from the safety cushion	29
Cleaning	29
How to act following an accident	31
Product service life	31
Disposal	31
Warranty conditions	33


Warning! To ensure optimum protection for your child, the CYBEX PALLAS M-fix must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the back rest).


Note! Country-specific regulations (e.g. regarding colour-coding on child seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg)	2
Brief instructions Group 2/3 (15-36 kg)	3
Approval	6
Positioning the seat correctly in the vehicle	9
Securing the child seat using the ISOFIX CONNECT system	11
Activating the L.S.P	13
Removal of the CYBEX PALLAS M-fix	13
Placing the seat in the vehicle	15
Adapting to body size	17
Removing the additional seat insert	17
Adjusting the safety cushion – ECE group 1 (9-18 kg)	17
Seated and lying position – ECE group 1 (9-18 kg)	19
Inclinable head rest	19
Strapping in using the safety cushion – ECE group 1 (9-18 kg)	21
Switching from Pallas M-fix to Solution M-fix (ECE group 1 to ECE group 2/3)	21
Strapping in without the safety cushion – ECE group 2/3 (15-36 kg)	23
Is your child correctly secured?	25
Care & maintenance	27
Removing the seat cover	27
Removing the cover from the headrest flap	27
Removing the cover from the head support	27
Removing the cover from the shoulder part	29
Removing the cover from the seat surface	29
Removing the cover from the safety cushion	29
Cleaning	29
How to act following an accident	31
Product service life	31
Disposal	31
Warranty conditions	33

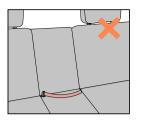

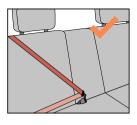



 





POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-fix with retracted ISOFIX CONNECT system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.



A 'semi-universal' approval is provided for fixtures using ISOFIX CONNECT locking arms (o). For this reason, ISOFIX CONNECT can only be used in ISOFIX certain vehicles. Please refer to the enclosed vehicle type list for approved vehicles. You can obtain the most up-to-date version from

www.cvbex-online.com.

In exceptional cases, the child seat may also be used on the front passenger seat. Please note the following in this case:

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at an incline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child seat may not be used on car seats facing to the side of the direction of travel. Use of the child seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle head rest must not be removed when fitting on a rear-facing seat! Even if not in use, the child seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX CONNECT system. An unsecured child seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.

POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-fix with retracted ISOFIX CONNECT system. can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.



A 'semi-universal' approval is provided for fixtures using ISOFIX CONNECT locking arms (o). For this reason, ISOFIX CONNECT can only be used in ISOFIX certain vehicles. Please refer to the enclosed vehicle type list for approved vehicles. You can obtain the most up-to-date version from

www.cvbex-online.com.

In exceptional cases, the child seat may also be used on the front passenger seat. Please note the following in this case:

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at an incline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child seat may not be used on car seats facing to the side of the direction of travel. Use of the child seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle head rest must not be removed when fitting on a rear-facing seat! Even if not in use, the child seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX CONNECT system. An unsecured child seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.



POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-fix with retracted ISOFIX CONNECT system. can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.



A 'semi-universal' approval is provided for fixtures using ISOFIX CONNECT locking arms (o). For this reason, ISOFIX CONNECT can only be used in ISOFIX certain vehicles. Please refer to the enclosed vehicle type list for approved vehicles. You can obtain the most up-to-date version from

www.cvbex-online.com.

In exceptional cases, the child seat may also be used on the front passenger seat. Please note the following in this case:


- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child seat.
- Always comply with the recommendations of the vehicle manufacturer.


WARNING! The diagonal belt (f) must run back at an incline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child seat is not suitable for your vehicle.


Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.


WARNING! The child seat may not be used on car seats facing to the side of the direction of travel. Use of the child seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle head rest must not be removed when fitting on a rear-facing seat! Even if not in use, the child seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX CONNECT system. An unsecured child seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.


Note! Never leave your child unattended in the vehicle.

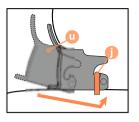

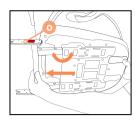

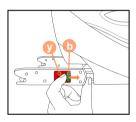

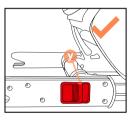

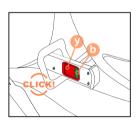





SECURING THE CHILD SEAT USING THE ISOFIX CONNECT SYSTEM



Using the ISOFIX-CONNECT system, you can fix the CYBEX PALLAS M-fix to the vehicle, thereby increasing your child's safety. Your child will still be secured using the three-point belt of your vehicle.

 Insert the supplied feed-in aids (u) with the longer strap upwards into the two ISOFIX fixture points (j). In some vehicles, it is better to mount the feed-in aids (u) in the opposite direction.

Note! The ISOFIX fixture points (j) are two metallic clips for each seat and are positioned between the back rest and the seating surface of the vehicle seat. In case of doubt, please refer to the driver's manual of your vehicle.

- Use the adjustment lever (c) under the seat cushion (d) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- Pull the two ISOFIX-CONNECT locking arms (o) as far as they will go.
- Now twist the ISOFIX-CONNECT locking arms (o) 180° so that they are facing the direction of the feed-in aids (u).

Note! Before joining the ISOFIX-CONNECT locking arms (o) with the ISOFIX fixture points (j), check the release buttons (y). If the green safety indicators (b) are visible, you must first release the ISOFIX-CONNECT locking arms before joining by pressing and pulling back the release button. Repeat the process if necessary with the second locking arm.

A perceptible click will be heard when the ISOFIX-CONNECT locking arm correctly locks in place with ISOFIX fixture points.

- Push the two locking arms (o) into the feed-in aids (u) until these lock into place in the ISOFIX fixture points with an audible 'click'.
- Ensure that the seat is secure by trying to pull it out of the feed-in aids (u).
- The green safety indicator (b) must now be clearly visible on the two red release buttons (y).
- You can now use the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat position.

Note! Note the information in the section "Placing the seat in the vehicle".

 You can now strap in your child; refer to the section "STRAPPING IN USING SAFETY CUSHION".

SECURING THE CHILD SEAT USING THE ISOFIX CONNECT SYSTEM



Using the ISOFIX-CONNECT system, you can fix the CYBEX PALLAS M-fix to the vehicle, thereby increasing your child's safety. Your child will still be secured using the three-point belt of your vehicle.

 Insert the supplied feed-in aids (u) with the longer strap upwards into the two ISOFIX fixture points (j). In some vehicles, it is better to mount the feed-in aids (u) in the opposite direction.

Note! The ISOFIX fixture points (j) are two metallic clips for each seat and are positioned between the back rest and the seating surface of the vehicle seat. In case of doubt, please refer to the driver's manual of your vehicle.

- Use the adjustment lever (c) under the seat cushion (d) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- Pull the two ISOFIX-CONNECT locking arms (o) as far as they will go.
- Now twist the ISOFIX-CONNECT locking arms (o) 180° so that they are facing the direction of the feed-in aids (u).

Note! Before joining the ISOFIX-CONNECT locking arms (o) with the ISOFIX fixture points (j), check the release buttons (y). If the green safety indicators (b) are visible, you must first release the ISOFIX-CONNECT locking arms before joining by pressing and pulling back the release button. Repeat the process if necessary with the second locking arm.

A perceptible click will be heard when the ISOFIX-CONNECT locking arm correctly locks in place with ISOFIX fixture points.

- Push the two locking arms (o) into the feed-in aids (u) until these lock into place in the ISOFIX fixture points with an audible 'click'.
- Ensure that the seat is secure by trying to pull it out of the feed-in aids (u).
- The green safety indicator (b) must now be clearly visible on the two red release buttons (v).
- You can now use the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat position.

Note! Note the information in the section "Placing the seat in the vehicle".

 You can now strap in your child; refer to the section "STRAPPING IN USING SAFETY CUSHION".

SECURING THE CHILD SEAT USING THE ISOFIX CONNECT SYSTEM



Using the ISOFIX-CONNECT system, you can fix the CYBEX PALLAS M-fix to the vehicle, thereby increasing your child's safety. Your child will still be secured using the three-point belt of your vehicle.

• Insert the supplied feed-in aids (u) with the longer strap upwards into the two ISOFIX fixture points (j). In some vehicles, it is better to mount the feed-in aids (u) in the opposite direction.

Note! The ISOFIX fixture points (j) are two metallic clips for each seat and are positioned between the back rest and the seating surface of the vehicle seat. In case of doubt, please refer to the driver's manual of your vehicle.

- Use the adjustment lever (c) under the seat cushion (d) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- Pull the two ISOFIX-CONNECT locking arms (o) as far as they will go.
- Now twist the ISOFIX-CONNECT locking arms (o) 180° so that they are facing the direction of the feed-in aids (u).


Note! Before joining the ISOFIX-CONNECT locking arms (o) with the ISOFIX fixture points (j), check the release buttons (y). If the green safety indicators (b) are visible, you must first release the ISOFIX-CONNECT locking arms before joining by pressing and pulling back the release button. Repeat the process if necessary with the second locking arm.

A perceptible click will be heard when the ISOFIX-CONNECT locking arm correctly locks in place with ISOFIX fixture points.


- Push the two locking arms (o) into the feed-in aids (u) until these lock into place in the ISOFIX fixture points with an audible 'click'.
- Ensure that the seat is secure by trying to pull it out of the feed-in aids (u).
- The green safety indicator (b) must now be clearly visible on the two red release buttons (y).
- You can now use the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat position.


Note! Note the information in the section "Placing the seat in the vehicle".

 
 You can now strap in your child; refer to the section "STRAPPING IN USING SAFETY CUSHION".

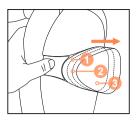



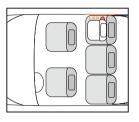

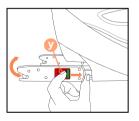



ACTIVATING THE L.S.P.

The "Linear Side Protection" system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door (see illustration).

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

REMOVAL OF THE CYBEX PALLAS M-FIX

Perform the installation steps in the reverse order.



- release buttons (y) and pulling them back simultaneously. ISOFIX • Pull the seat out of the feed-in aids (u).
 - Rotate the locking arms (o) 180°.
- Operate the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix and push the locking arms in as far as they will go.

Note! By folding in the locking arms (o), you are not just protecting the vehicle seat but also the locking arms of the ISOFIX CONNECT system from dirt and damage.

· Unlock the ISOFIX locking arms (o) on both sides by pushing the red

AU

ACTIVATING THE L.S.P.

The "Linear Side Protection" system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door (see illustration).

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

ACTIVATING THE L.S.P.

The "Linear Side Protection" system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

 
Note! Always activate the L.S.P. on the side of the seat facing the car door (see illustration).

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

REMOVAL OF THE CYBEX PALLAS M-FIX

Perform the installation steps in the reverse order.





- ISOFIX Pull the seat out of the feed-in aids (u).
 - Rotate the locking arms (o) 180°.
- · Operate the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix and push the locking arms in as far as they will go.

Note! By folding in the locking arms (o), you are not just protecting the vehicle seat but also the locking arms of the ISOFIX CONNECT system from dirt and damage.

REMOVAL OF THE CYBEX PALLAS M-FIX

Perform the installation steps in the reverse order.




- release buttons (y) and pulling them back simultaneously. • Pull the seat out of the feed-in aids (u).

 - Rotate the locking arms (o) 180°.
- · Operate the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix and push the locking arms in as far as they will go.

• Unlock the ISOFIX locking arms (o) on both sides by pushing the red

Note! By folding in the locking arms (o), you are not just protecting the vehicle seat but also the locking arms of the ISOFIX CONNECT system from dirt and damage.



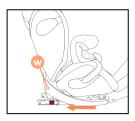





PLACING THE SEAT IN THE VEHICLE

Place the child seat on the appropriate seat in the car.



- Always ensure that the entire surface of the back rest (a) of the CYBEX PALLAS M-fix is placed fully against the back rest of the vehicle seat. The child seat must never be in a lying position. If necessary, you can adjust the distance using the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- If the head rest of the vehicle is in the way, pull it out all the way, turn it away
 or remove it completely (for exceptions to this, please refer to the section
 "POSITIONING THE SEAT CORRECTLY IN THE VEHICLE") The back rest (a) will
 perfectly adapt to practically any incline of the vehicle seat.

WARNING! The full surface of the back rest of the CYBEX child seat must be against the back rest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer to in this connection to our cleaning instructions in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

PLACING THE SEAT IN THE VEHICLE

Place the child seat on the appropriate seat in the car.



- Always ensure that the entire surface of the back rest (a) of the CYBEX PALLAS M-fix is placed fully against the back rest of the vehicle seat. The child seat must never be in a lying position. If necessary, you can adjust the distance using the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- If the head rest of the vehicle is in the way, pull it out all the way, turn it away
 or remove it completely (for exceptions to this, please refer to the section
 "POSITIONING THE SEAT CORRECTLY IN THE VEHICLE") The back rest (a) will
 perfectly adapt to practically any incline of the vehicle seat.

WARNING! The full surface of the back rest of the CYBEX child seat must be against the back rest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer to in this connection to our cleaning instructions in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

PLACING THE SEAT IN THE VEHICLE

Place the child seat on the appropriate seat in the car.




- Always ensure that the entire surface of the back rest (a) of the CYBEX PALLAS M-fix is placed fully against the back rest of the vehicle seat. The child seat must never be in a lying position. If necessary, you can adjust the distance using the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- If the head rest of the vehicle is in the way, pull it out all the way, turn it away
 or remove it completely (for exceptions to this, please refer to the section
 "POSITIONING THE SEAT CORRECTLY IN THE VEHICLE") The back rest (a) will
 perfectly adapt to practically any incline of the vehicle seat.


WARNING! The full surface of the back rest of the CYBEX child seat must be against the back rest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer to in this connection to our cleaning instructions in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.



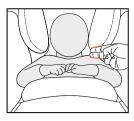



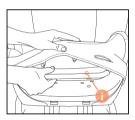



ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M-fix to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 2 onwards, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable head rest (e). To do this, pull the adjustment level (h) upwards to unlock the head rest (e).
- Adjust it so that there is space for two fingers between the lower edge of the head rest (e) and the shoulder of the child.

Note! Only an optimally adjusted head rest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M-fix can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

- 1. Release the front push buttons of the seat cover from the seat cushion (d).
- Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
- 3. The seat insert must be removed in accordance with the age specifications stated above.
- 4. Pull the seat cover to its original state and fix it in place again.

ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and seat surface (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it is against the child but is not pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M-fix to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months
- From the age of 2 onwards, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable head rest (e). To do this, pull the adjustment level (h) upwards to unlock the head rest (e).
- Adjust it so that there is space for two fingers between the lower edge of the head rest (e) and the shoulder of the child.

Note! Only an optimally adjusted head rest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M-fix can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

- 1. Release the front push buttons of the seat cover from the seat cushion (d).
- 2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
- The seat insert must be removed in accordance with the age specifications stated above.
- 4. Pull the seat cover to its original state and fix it in place again.

ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and seat surface (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it is against the child but is not pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M-fix to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months
- From the age of 2 onwards, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable head rest (e). To do this, pull the adjustment level (h) upwards to unlock the head rest (e).
- Adjust it so that there is space for two fingers between the lower edge of the head rest (e) and the shoulder of the child.

Note! Only an optimally adjusted head rest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M-fix can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

- 1. Release the front push buttons of the seat cover from the seat cushion (d).
- 2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
- 3. The seat insert must be removed in accordance with the age specifications stated above.
- 4. Pull the seat cover to its original state and fix it in place again.


ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

 
By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and seat surface (d) and are used to support the safety cushion (p) on the seat.


Adjust the safety cushion (p) so that it is against the child but is not pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

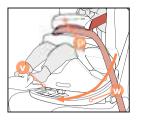





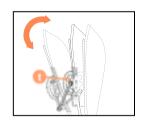





SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M-fix to a lying position, the vehicle's own belt system does not need to be opened.

 If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M-fix will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

 To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

INCLINABLE HEAD REST

The inclinable head rest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the head rest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the inclinable head rest (r), as this is the only way that the head rest can provide optimum protection from side collisions.

The incline angle of the head rest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the head rest pulled back.

WARNING! Never block the locking mechanism (t) using objects! In the event of an accident, the incline adjustment mechanism must move smoothly, or else your child may be injured!

R

SEATED AND LYING POSITION - ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M-fix to a lying position, the vehicle's own belt system does not need to be opened.

 If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M-fix will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

To restore the upright seat position from the lying position once the child is out of
the seat, press the adjustment button (v) again and apply light pressure against the
seat cushion (d) to guide the child seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

INCLINABLE HEAD REST

The inclinable head rest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the head rest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the inclinable head rest (r), as this is the only way that the head rest can provide optimum protection from side collisions.

The incline angle of the head rest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the head rest pulled back.

WARNING! Never block the locking mechanism (t) using objects! In the event of an accident, the incline adjustment mechanism must move smoothly, or else your child may be injured!

SEATED AND LYING POSITION - ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M-fix to a lying position, the vehicle's own belt system does not need to be opened.

 If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M-fix will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

 To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

INCLINABLE HEAD REST

The inclinable head rest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the head rest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the inclinable head rest (r), as this is the only way that the head rest can provide optimum protection from side collisions.

 
The incline angle of the head rest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the head rest pulled back.


WARNING! Never block the locking mechanism (t) using objects! In the event of an accident, the incline adjustment mechanism must move smoothly, or else your child may be injured!











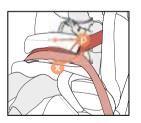

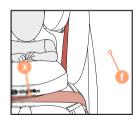

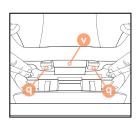



STRAPPING IN USING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

- 1. Now insert the previously adjusted safety cushion (p) (refer to the section "ADJUSTING THE SAFETY CUSHION").
- 2. Pull the entire length of the vehicle's three-point belt out. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the helt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child seat.

- 3. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".
- 4. Tighten the lap belt by pulling the diagonal belt.
- Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
- 6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
- 7. Feed the diagonal belt (f) either between the head and shoulder rests (see illustration) or outside along the shoulder rest, depending on how much of the belt length is available. Please always choose the option that uses the least amount of belt length.

SWITCHING FROM PALLAS M-FIX TO SOLUTION M-FIX (ECE GROUP 1 TO ECE GROUP 2/3)

- 1. Remove the safety cushion (p).
- Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
- Press the adjustment button (v) and pull the seat away from the frame (w) completely.

STRAPPING IN USING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

- 1. Now insert the previously adjusted safety cushion (p) (refer to the section "ADJUSTING THE SAFETY CUSHION").
- 2. Pull the entire length of the vehicle's three-point belt out. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child seat.

- Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".
- 4. Tighten the lap belt by pulling the diagonal belt.
- Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
- 6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt quide (x).
- 7. Feed the diagonal belt (f) either between the head and shoulder rests (see illustration) or outside along the shoulder rest, depending on how much of the belt length is available. Please always choose the option that uses the least amount of belt length.

STRAPPING IN USING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

- 1. Now insert the previously adjusted safety cushion (p) (refer to the section "ADJUSTING THE SAFETY CUSHION").
- 2. Pull the entire length of the vehicle's three-point belt out. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child seat.


- Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".
- 4. Tighten the lap belt by pulling the diagonal belt.
- Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
- 6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
- 7. Feed the diagonal belt (f) either between the head and shoulder rests (see illustration) or outside along the shoulder rest, depending on how much of the belt length is available. Please always choose the option that uses the least amount of belt length.


SWITCHING FROM PALLAS M-FIX TO SOLUTION M-FIX (ECE GROUP 1 TO ECE GROUP 2/3)

- 1. Remove the safety cushion (p).
- Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
- 3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

 
SWITCHING FROM PALLAS M-FIX TO SOLUTION M-FIX (ECE GROUP 1 TO ECE GROUP 2/3)


- 1. Remove the safety cushion (p).
- Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
- 3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.

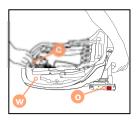

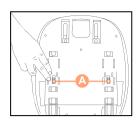





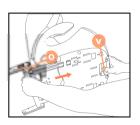







ISOFIX CONNECT modification

- Operate the adjustment lever (c) on the frame (w) and pull the two ISOFIX CONNECT locking arms (o) until there is some resistance.
- Keep the adjustment lever held (c) and release the two snap clips (A) on the underside of the seat elevator (d), one after the other. If necessary, use a screwdriver.

Note! If this is done correctly, the ISOFIX CONNECT locking arms (o) will easily release from the frame (w).

WARNING! Note the minimum drop height of the ISOFIX CONNECT locking arms. Failure to note this may result in damage to components or injury to yourself or other persons nearby.

Now push the ISOFIX CONNECT locking arms (o) into the designated openings on the underside of the seat elevator (d) until there is some resistance.

WARNING! Ensure that the locking arms are installed the right way around and that the teeth of the locking arms are up when inserting them into the seat.

- 7. Operate the adjustment button (v) on the underside of the seat elevator (d) and push the locking arms (o) in as far as they will go.
- For further information on correct installation, please refer to the section "SECURING THE CHILD SEAT USING THE ISOFEX CONNECT SYSTEM"

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

STRAPPING IN WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

 Place your child in the child seat. Pull the three-point belt right out and feed it along the belt buckle (I) in front of your child.

WARNING! Never twist the belt.

Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".

ISOFIX CONNECT modification

- Operate the adjustment lever (c) on the frame (w) and pull the two ISOFIX CONNECT locking arms (o) until there is some resistance.
- Keep the adjustment lever held (c) and release the two snap clips (A) on the underside of the seat elevator (d), one after the other. If necessary, use a screwdriver.

Note! If this is done correctly, the ISOFIX CONNECT locking arms (o) will easily release from the frame (w).

WARNING! Note the minimum drop height of the ISOFIX CONNECT locking arms. Failure to note this may result in damage to components or injury to yourself or other persons nearby.

Now push the ISOFIX CONNECT locking arms (o) into the designated openings on the underside of the seat elevator (d) until there is some resistance.

WARNING! Ensure that the locking arms are installed the right way around and that the teeth of the locking arms are up when inserting them into the seat.

- 7. Operate the adjustment button (v) on the underside of the seat elevator (d) and push the locking arms (o) in as far as they will go.
- 8. For further information on correct installation, please refer to the section "SECURING THE CHILD SEAT USING THE ISOFEX CONNECT SYSTEM"

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

ISOFIX CONNECT modification

- 4. Operate the adjustment lever (c) on the frame (w) and pull the two ISOFIX CONNECT locking arms (o) until there is some resistance.
- Keep the adjustment lever held (c) and release the two snap clips (A) on the underside of the seat elevator (d), one after the other. If necessary, use a screwdriver.

Note! If this is done correctly, the ISOFIX CONNECT locking arms (o) will easily release from the frame (w).

WARNING! Note the minimum drop height of the ISOFIX CONNECT locking arms. Failure to note this may result in damage to components or injury to yourself or other persons nearby.

Now push the ISOFIX CONNECT locking arms (o) into the designated openings on the underside of the seat elevator (d) until there is some resistance.

WARNING! Ensure that the locking arms are installed the right way around and that the teeth of the locking arms are up when inserting them into the seat.

- Operate the adjustment button (v) on the underside of the seat elevator (d) and push the locking arms (o) in as far as they will go.
- 8. For further information on correct installation, please refer to the section "SECURING THE CHILD SEAT USING THE ISOFEX CONNECT SYSTEM"

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

STRAPPING IN WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

 Place your child in the child seat. Pull the three-point belt right out and feed it along the belt buckle (I) in front of your child.

WARNING! Never twist the belt.

Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".

STRAPPING IN WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

 Place your child in the child seat. Pull the three-point belt right out and feed it along the belt buckle (I) in front of your child.

 
WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (I). It must lock into place with an audible "CLICK".













- 3. Next, place the lap belt (n) in the lower belt guides (k) of the child seat.
- 4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (I) must never cross the arm rest. If the belt system is too long, the child seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the shoulder rest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the head rest to change the position of the belt. The height of the head rest (e) can still be adjusted while in the car.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt quide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at an incline downwards.
- the entire belt is tightly against your child's body and is not twisted.

- 3. Next, place the lap belt (n) in the lower belt guides (k) of the child seat.
- 4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt quide (k).

WARNING! The vehicle belt buckle (I) must never cross the arm rest. If the belt system is too long, the child seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the shoulder rest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the head rest to change the position of the belt. The height of the head rest (e) can still be adjusted while in the car.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at an incline downwards.
- the entire belt is tightly against your child's body and is not twisted.

- 3. Next, place the lap belt (n) in the lower belt guides (k) of the child seat.
- 4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (I) must never cross the arm rest. If the belt system is too long, the child seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the shoulder rest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the head rest to change the position of the belt. The height of the head rest (e) can still be adjusted while in the car.

IS YOUR CHILD CORRECTLY SECURED?


To ensure optimum safety for your child, please always check before commencing travel that


- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at an incline downwards.
- the entire belt is tightly against your child's body and is not twisted.







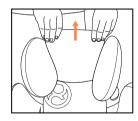

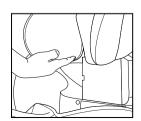



CARE & MAINTENANCE

To ensure that your child seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

Warning! The child seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

CARE & MAINTENANCE

To ensure that your child seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child seat should be checked regularly for damage. The
 mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

Warning! The child seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

CARE & MAINTENANCE

To ensure that your child seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

Warning! The child seat must never be used without the cover.


REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.


REMOVING THE COVER FROM THE HEAD SUPPORT


Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel



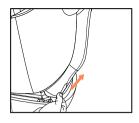




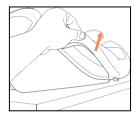

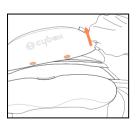



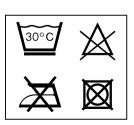

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SEAT SURFACE

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

Warning! Never use harsh cleaning agents or bleaches!

Z

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

2

REMOVING THE COVER FROM THE SEAT SURFACE

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SEAT SURFACE

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

Warning! Never use harsh cleaning agents or bleaches!

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

Warning! Never use harsh cleaning agents or bleaches!

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M-fix is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child seat must be removed from the vehicle or covered with a bright cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M-fix is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child seat must be removed from the vehicle or covered with a bright cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M-fix is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child seat must be removed from the vehicle or covered with a bright cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies is the product was checked for completeness. manufacturing defects and material defects immediately upon purchase. If the product was purchase by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that original sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

CYBEX GmbH

Riedinger Str. 18, 95448 Bayreuth, Germany Tel.: 0921 78 511-511, Fax.: 0921 78 511-888

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies is the product was checked for completeness. manufacturing defects and material defects immediately upon purchase. If the product was purchase by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that original sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies is the product was checked for completeness. manufacturing defects and material defects immediately upon purchase. If the product was purchase by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that original sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.



Dear customer,

Thank you for choosing the CYBEX Pallas M-fix child seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX Pallas M-fix child seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX Pallas M-fix child seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX Pallas M-fix child seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.

Dear customer,

Thank you for choosing the CYBEX Pallas M-fix child seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX Pallas M-fix child seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.





Approval

Cybex PALLAS M-fix

Seat elevator with back rest and head rest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard ECE R-44/04.

CYBEX PALLAS M-fix - group 1, 9 to 18 kg CYBEX SOLUTION M-fix - group 2/3, 15 to 36 kg

Approval

Cybex PALLAS M-fix

Seat elevator with back rest and head rest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard ECE R-44/04,

CYBEX PALLAS M-fix - group 1, 9 to 18 kg CYBEX SOLUTION M-fix - group 2/3, 15 to 36 kg

Approval

Cybex PALLAS M-fix

Seat elevator with back rest and head rest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard ECE R-44/04,

CYBEX PALLAS M-fix - group 1, 9 to 18 kg CYBEX SOLUTION M-fix - group 2/3, 15 to 36 kg

EΕ

Contents

Warning! To ensure optimum protection for your child, the CYBEX PALLAS M-fix must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the back rest).

Note! Country-specific regulations (e.g. regarding colour-coding on child seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg)	2
Brief instructions Group 2/3 (15-36 kg)	3
Approval	36
Positioning the seat correctly in the vehicle	38
Securing the child seat using the ISOFIX CONNECT system	40
Activating the L.S.P.	42
Removal of the CYBEX PALLAS M-fix	42
Placing the seat in the vehicle	44
Adapting to body size	
Removing the additional seat insert	46
Adjusting the safety cushion – ECE group 1 (9-18 kg)	46
Seated and lying position – ECE group 1 (9-18 kg)	48
Inclinable head rest	
Strapping in using the safety cushion – ECE group 1 (9-18 kg)	50
Switching from Pallas M-fix to Solution M-fix (ECE group 1 to ECE group 2/3)	50
Strapping in without the safety cushion – ECE group 2/3 (15-36 kg)	52
Is your child correctly secured?	54
Care & maintenance	56
Removing the seat cover	56
Removing the cover from the headrest flap	56
Removing the cover from the head support	56
Removing the cover from the shoulder part	58
Removing the cover from the seat surface	58
Removing the cover from the safety cushion	58
Cleaning	58
How to act following an accident	60
Product service life	60
Disposal	60
Warranty conditions	62

LV

Contents L1

T Contents

Warning! To ensure optimum protection for your child, the CYBEX PALLAS M-fix must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the back rest).

Note! Country-specific regulations (e.g. regarding colour-coding on child seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.


Brief instructions Group 1 (9-18 kg)	2
Brief instructions Group 2/3 (15-36 kg)	3
Approval	36
Positioning the seat correctly in the vehicle	39
Securing the child seat using the ISOFIX CONNECT system	41
Activating the L.S.P.	43
Removal of the CYBEX PALLAS M-fix	43
Placing the seat in the vehicle	45
Adapting to body size	47
Removing the additional seat insert	47
Adjusting the safety cushion – ECE group 1 (9-18 kg)	47
Seated and lying position – ECE group 1 (9-18 kg)	49
Inclinable head rest	49
Strapping in using the safety cushion – ECE group 1 (9-18 kg)	51
Switching from Pallas M-fix to Solution M-fix (ECE group 1 to ECE group 2/3)	51
Strapping in without the safety cushion – ECE group 2/3 (15-36 kg)	53
s your child correctly secured?	
Care & maintenance	57
Removing the seat cover	57
Removing the cover from the headrest flap	57
Removing the cover from the head support	57
Removing the cover from the shoulder part	59
Removing the cover from the seat surface	59
Removing the cover from the safety cushion	59
Cleaning	59
How to act following an accident	
Product service life	61
Disposal	61
Warranty conditions	63


Warning! To ensure optimum protection for your child, the CYBEX PALLAS M-fix must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the back rest).

Note! Country-specific regulations (e.g. regarding colour-coding on child seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.

Brief instructions Group 1 (9-18 kg)	2
Brief instructions Group 2/3 (15-36 kg)	
Approval	
Positioning the seat correctly in the vehicle	
Securing the child seat using the ISOFIX CONNECT system	41
Activating the L.S.P.	
Removal of the CYBEX PALLAS M-fix	
Placing the seat in the vehicle	
ů .	
Adapting to body size	
Adjusting the safety cushion – ECE group 1 (9-18 kg)	
Seated and lying position – ECE group 1 (9-18 kg)	
Inclinable head rest	
Strapping in using the safety cushion – ECE group 1 (9-18 kg)	
Switching from Pallas M-fix to Solution M-fix (ECE group 1 to ECE group 2/3)	
Strapping in without the safety cushion – ECE group 2/3 (15-36 kg)	
Is your child correctly secured?	
Care & maintenance	
Removing the seat cover	57
Removing the cover from the headrest flap	57
Removing the cover from the head support	57
Removing the cover from the shoulder part	59
Removing the cover from the seat surface	59
Removing the cover from the safety cushion	59
Cleaning	59
How to act following an accident	61
Product service life	61
Disposal	61
Warranty conditions	

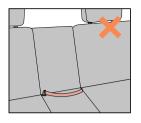

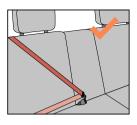









POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-fix with retracted ISOFIX CONNECT system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.



A 'semi-universal' approval is provided for fixtures using ISOFIX CONNECT locking arms (o). For this reason, ISOFIX CONNECT can only be used in ISOFIX certain vehicles. Please refer to the enclosed vehicle type list for approved vehicles. You can obtain the most up-to-date version from

www.cvbex-online.com.

In exceptional cases, the child seat may also be used on the front passenger seat. Please note the following in this case:

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at an incline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child seat may not be used on car seats facing to the side of the direction of travel. Use of the child seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle head rest must not be removed when fitting on a rear-facing seat! Even if not in use, the child seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX CONNECT system. An unsecured child seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.

POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-fix with retracted ISOFIX CONNECT system. can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.



A 'semi-universal' approval is provided for fixtures using ISOFIX CONNECT locking arms (o). For this reason, ISOFIX CONNECT can only be used in ISOFIX certain vehicles. Please refer to the enclosed vehicle type list for approved vehicles. You can obtain the most up-to-date version from

www.cvbex-online.com.

In exceptional cases, the child seat may also be used on the front passenger seat. Please note the following in this case:

- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child seat.
- Always comply with the recommendations of the vehicle manufacturer.

WARNING! The diagonal belt (f) must run back at an incline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child seat is not suitable for your vehicle.

Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

WARNING! The child seat may not be used on car seats facing to the side of the direction of travel. Use of the child seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle head rest must not be removed when fitting on a rear-facing seat! Even if not in use, the child seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX CONNECT system. An unsecured child seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.

Note! Never leave your child unattended in the vehicle.

The CYBEX PALLAS M-fix with retracted ISOFIX CONNECT system.

can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.



A 'semi-universal' approval is provided for fixtures using ISOFIX CONNECT locking arms (o). For this reason, ISOFIX CONNECT can only be used in ISOFIX certain vehicles. Please refer to the enclosed vehicle type list for approved vehicles. You can obtain the most up-to-date version from

www.cvbex-online.com.

In exceptional cases, the child seat may also be used on the front passenger seat. Please note the following in this case:


- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child seat.
- Always comply with the recommendations of the vehicle manufacturer.


WARNING! The diagonal belt (f) must run back at an incline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child seat is not suitable for your vehicle.


Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.


WARNING! The child seat may not be used on car seats facing to the side of the direction of travel. Use of the child seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle head rest must not be removed when fitting on a rear-facing seat! Even if not in use, the child seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX CONNECT system. An unsecured child seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.


Note! Never leave your child unattended in the vehicle.

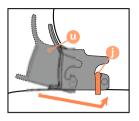

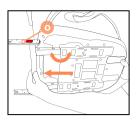


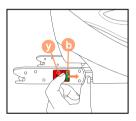

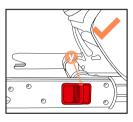

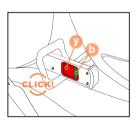



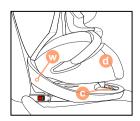

SECURING THE CHILD SEAT USING THE ISOFIX CONNECT SYSTEM



Using the ISOFIX-CONNECT system, you can fix the CYBEX PALLAS M-fix to the vehicle, thereby increasing your child's safety. Your child will still be secured using the three-point belt of your vehicle.

 Insert the supplied feed-in aids (u) with the longer strap upwards into the two ISOFIX fixture points (j). In some vehicles, it is better to mount the feed-in aids (u) in the opposite direction.

Note! The ISOFIX fixture points (j) are two metallic clips for each seat and are positioned between the back rest and the seating surface of the vehicle seat. In case of doubt, please refer to the driver's manual of your vehicle.

- Use the adjustment lever (c) under the seat cushion (d) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- Pull the two ISOFIX-CONNECT locking arms (o) as far as they will go.
- Now twist the ISOFIX-CONNECT locking arms (o) 180° so that they are facing the direction of the feed-in aids (u).

Note! Before joining the ISOFIX-CONNECT locking arms (o) with the ISOFIX fixture points (j), check the release buttons (y). If the green safety indicators (b) are visible, you must first release the ISOFIX-CONNECT locking arms before joining by pressing and pulling back the release button. Repeat the process if necessary with the second locking arm.

A perceptible click will be heard when the ISOFIX-CONNECT locking arm correctly locks in place with ISOFIX fixture points.

- Push the two locking arms (o) into the feed-in aids (u) until these lock into place in the ISOFIX fixture points with an audible 'click'.
- Ensure that the seat is secure by trying to pull it out of the feed-in aids (u).
- The green safety indicator (b) must now be clearly visible on the two red release buttons (y).
- You can now use the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat position.

Note! Note the information in the section "Placing the seat in the vehicle".

 You can now strap in your child; refer to the section "STRAPPING IN USING SAFETY CUSHION".

5

SECURING THE CHILD SEAT USING THE ISOFIX CONNECT SYSTEM



Using the ISOFIX-CONNECT system, you can fix the CYBEX PALLAS M-fix to the vehicle, thereby increasing your child's safety. Your child will still be secured using the three-point belt of your vehicle.

• Insert the supplied feed-in aids (u) with the longer strap upwards into the two ISOFIX fixture points (j). In some vehicles, it is better to mount the feed-in aids (u) in the opposite direction.

Note! The ISOFIX fixture points (i) are two metallic clips for each seat and are positioned between the back rest and the seating surface of the vehicle seat. In case of doubt, please refer to the driver's manual of your vehicle.

- Use the adjustment lever (c) under the seat cushion (d) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- Pull the two ISOFIX-CONNECT locking arms (o) as far as they will go.
- Now twist the ISOFIX-CONNECT locking arms (o) 180° so that they are facing the direction of the feed-in aids (u).

Note! Before joining the ISOFIX-CONNECT locking arms (o) with the ISOFIX fixture points (i), check the release buttons (v). If the green safety indicators (b) are visible, you must first release the ISOFIX-CONNECT locking arms before joining by pressing and pulling back the release button. Repeat the process if necessary with the second locking arm.

A perceptible click will be heard when the ISOFIX-CONNECT locking arm correctly locks in place with ISOFIX fixture points.

- Push the two locking arms (o) into the feed-in aids (u) until these lock into place in the ISOFIX fixture points with an audible 'click'.
- Ensure that the seat is secure by trying to pull it out of the feed-in aids (u).
- The green safety indicator (b) must now be clearly visible on the two red release buttons (v).
- You can now use the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat position.

Note! Note the information in the section "Placing the seat in the vehicle".

• You can now strap in your child; refer to the section "STRAPPING IN USING SAFETY CUSHION".

SECURING THE CHILD SEAT USING THE ISOFIX CONNECT SYSTEM



Using the ISOFIX-CONNECT system, you can fix the CYBEX PALLAS M-fix to the vehicle, thereby increasing your child's safety. Your child will still be secured using the three-point belt of your vehicle.

• Insert the supplied feed-in aids (u) with the longer strap upwards into the two ISOFIX fixture points (i). In some vehicles, it is better to mount the feed-in aids (u) in the opposite direction.

Note! The ISOFIX fixture points (i) are two metallic clips for each seat and are positioned between the back rest and the seating surface of the vehicle seat. In case of doubt, please refer to the driver's manual of your vehicle.

- Use the adjustment lever (c) under the seat cushion (d) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- Pull the two ISOFIX-CONNECT locking arms (o) as far as they will go.
- Now twist the ISOFIX-CONNECT locking arms (o) 180° so that they are facing the direction of the feed-in aids (u).


Note! Before joining the ISOFIX-CONNECT locking arms (o) with the ISOFIX fixture points (j), check the release buttons (y). If the green safety indicators (b) are visible, you must first release the ISOFIX-CONNECT locking arms before joining by pressing and pulling back the release button. Repeat the process if necessary with the second locking arm.

A perceptible click will be heard when the ISOFIX-CONNECT locking arm correctly locks in place with ISOFIX fixture points.


- Push the two locking arms (o) into the feed-in aids (u) until these lock into place in the ISOFIX fixture points with an audible 'click'.
- Ensure that the seat is secure by trying to pull it out of the feed-in aids (u).
- The green safety indicator (b) must now be clearly visible on the two red release buttons (v).
- You can now use the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat position.


Note! Note the information in the section "Placing the seat in the vehicle".

 
• You can now strap in your child; refer to the section "STRAPPING IN USING SAFETY CUSHION".

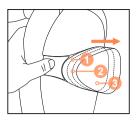



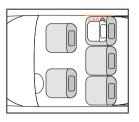

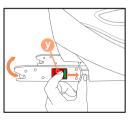



ACTIVATING THE L.S.P.

The "Linear Side Protection" system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door (see illustration).

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

REMOVAL OF THE CYBEX PALLAS M-FIX

Perform the installation steps in the reverse order.



- release buttons (y) and pulling them back simultaneously. ISOFIX • Pull the seat out of the feed-in aids (u).

 - Rotate the locking arms (o) 180°.
- Operate the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix and push the locking arms in as far as they will go.

· Unlock the ISOFIX locking arms (o) on both sides by pushing the red

Note! By folding in the locking arms (o), you are not just protecting the vehicle seat but also the locking arms of the ISOFIX CONNECT system from dirt and damage.

Note! Always activate the L.S.P. on the side of the seat facing the car door (see illustration).

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

The "Linear Side Protection" system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door (see illustration).

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

REMOVAL OF THE CYBEX PALLAS M-FIX

Perform the installation steps in the reverse order.





- ISOFIX Pull the seat out of the feed-in aids (u).
 - Rotate the locking arms (o) 180°.
- · Operate the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix and push the locking arms in as far as they will go.

release buttons (y) and pulling them back simultaneously.

Note! By folding in the locking arms (o), you are not just protecting the vehicle seat but also the locking arms of the ISOFIX CONNECT system from dirt and damage.

REMOVAL OF THE CYBEX PALLAS M-FIX

Perform the installation steps in the reverse order.




- release buttons (y) and pulling them back simultaneously.
- ISOFIX Pull the seat out of the feed-in aids (u).
 - Rotate the locking arms (o) 180°.
- · Operate the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix and push the locking arms in as far as they will go.

• Unlock the ISOFIX locking arms (o) on both sides by pushing the red

Note! By folding in the locking arms (o), you are not just protecting the vehicle seat but also the locking arms of the ISOFIX CONNECT system from dirt and damage.



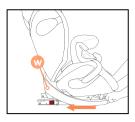





PLACING THE SEAT IN THE VEHICLE

Place the child seat on the appropriate seat in the car.



- Always ensure that the entire surface of the back rest (a) of the CYBEX PALLAS M-fix is placed fully against the back rest of the vehicle seat. The child seat must never be in a lying position. If necessary, you can adjust the distance using the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- If the head rest of the vehicle is in the way, pull it out all the way, turn it away
 or remove it completely (for exceptions to this, please refer to the section
 "POSITIONING THE SEAT CORRECTLY IN THE VEHICLE") The back rest (a) will
 perfectly adapt to practically any incline of the vehicle seat.

WARNING! The full surface of the back rest of the CYBEX child seat must be against the back rest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer to in this connection to our cleaning instructions in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

2

占

Place the child seat on the appropriate seat in the car.



- Always ensure that the entire surface of the back rest (a) of the CYBEX PALLAS M-fix is placed fully against the back rest of the vehicle seat. The child seat must never be in a lying position. If necessary, you can adjust the distance using the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- If the head rest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section "POSITIONING THE SEAT CORRECTLY IN THE VEHICLE") The back rest (a) will perfectly adapt to practically any incline of the vehicle seat.

WARNING! The full surface of the back rest of the CYBEX child seat must be against the back rest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer to in this connection to our cleaning instructions in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.

PLACING THE SEAT IN THE VEHICLE

Place the child seat on the appropriate seat in the car.

 


- Always ensure that the entire surface of the back rest (a) of the CYBEX PALLAS M-fix is placed fully against the back rest of the vehicle seat. The child seat must never be in a lying position. If necessary, you can adjust the distance using the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- If the head rest of the vehicle is in the way, pull it out all the way, turn it away or remove it completely (for exceptions to this, please refer to the section "POSITIONING THE SEAT CORRECTLY IN THE VEHICLE") The back rest (a) will perfectly adapt to practically any incline of the vehicle seat.


WARNING! The full surface of the back rest of the CYBEX child seat must be against the back rest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer to in this connection to our cleaning instructions in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.







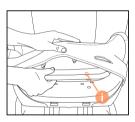



ADAPTING TO BODY SIZE In order to optimally adapt the CYBEX PALLAS M-fix to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months
- From the age of 2 onwards, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable head rest (e). To do this, pull the adjustment level (h) upwards to unlock the head rest (e).
- Adjust it so that there is space for two fingers between the lower edge of the head rest (e) and the shoulder of the child.

Note! Only an optimally adjusted head rest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M-fix can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

- 1. Release the front push buttons of the seat cover from the seat cushion (d).
- 2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
- 3. The seat insert must be removed in accordance with the age specifications stated above.
- 4. Pull the seat cover to its original state and fix it in place again.

ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and seat surface (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it is against the child but is not pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

In order to optimally adapt the CYBEX PALLAS M-fix to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months
- From the age of 2 onwards, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable head rest (e). To do this, pull the adjustment level (h) upwards to unlock the head rest (e).
- Adjust it so that there is space for two fingers between the lower edge of the head rest (e) and the shoulder of the child.

Note! Only an optimally adjusted head rest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M-fix can be adjusted to one of twelve positions.

ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M-fix to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months.
- From the age of 2 onwards, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable head rest (e). To do this, pull the adjustment level (h) upwards to unlock the head rest (e).
- Adjust it so that there is space for two fingers between the lower edge of the head rest (e) and the shoulder of the child.

Note! Only an optimally adjusted head rest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M-fix can be adjusted to one of twelve positions.

H



5

REMOVING THE ADDITIONAL SEAT INSERT

- 1. Release the front push buttons of the seat cover from the seat cushion (d).
- Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
- The seat insert must be removed in accordance with the age specifications stated above.
- 4. Pull the seat cover to its original state and fix it in place again.

REMOVING THE ADDITIONAL SEAT INSERT

- 1. Release the front push buttons of the seat cover from the seat cushion (d).
- 2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
- 3. The seat insert must be removed in accordance with the age specifications stated above.
- 4. Pull the seat cover to its original state and fix it in place again.

ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and seat surface (d) and are used to support the safety cushion (p) on the seat.

Adjust the safety cushion (p) so that it is against the child but is not pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)


By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and seat surface (d) and are used to support the safety cushion (p) on the seat.


Adjust the safety cushion (p) so that it is against the child but is not pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!



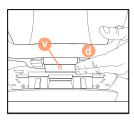



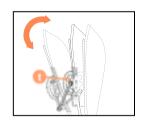





SEATED AND LYING POSITION – ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M-fix to a lying position, the vehicle's own belt system does not need to be opened.

 If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M-fix will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

 To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

INCLINABLE HEAD REST

The inclinable head rest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the head rest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the inclinable head rest (r), as this is the only way that the head rest can provide optimum protection from side collisions.

The incline angle of the head rest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the head rest pulled back.

WARNING! Never block the locking mechanism (t) using objects! In the event of an accident, the incline adjustment mechanism must move smoothly, or else your child may be injured!

SEATED AND LYING POSITION - ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M-fix to a lying position, the vehicle's own belt system does not need to be opened.

 If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M-fix will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

To restore the upright seat position from the lying position once the child is out of
the seat, press the adjustment button (v) again and apply light pressure against the
seat cushion (d) to guide the child seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

INCLINABLE HEAD REST

The inclinable head rest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the head rest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.

Note! Ensure that your child's head is always in contact with the inclinable head rest (r), as this is the only way that the head rest can provide optimum protection from side collisions.

The incline angle of the head rest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the head rest pulled back.

WARNING! Never block the locking mechanism (t) using objects! In the event of an accident, the incline adjustment mechanism must move smoothly, or else your child may be injured!

SEATED AND LYING POSITION - ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M-fix to a lying position, the vehicle's own belt system does not need to be opened.

 If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M-fix will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

 To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to quide the child seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

INCLINABLE HEAD REST

The inclinable head rest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the head rest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.


Note! Ensure that your child's head is always in contact with the inclinable head rest (r), as this is the only way that the head rest can provide optimum protection from side collisions.


The incline angle of the head rest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the head rest pulled back.


WARNING! Never block the locking mechanism (t) using objects! In the event of an accident, the incline adjustment mechanism must move smoothly, or else your child may be injured!






 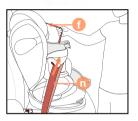


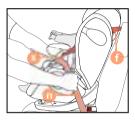

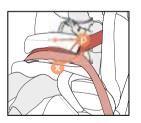



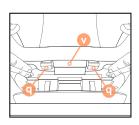



STRAPPING IN USING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

- 1. Now insert the previously adjusted safety cushion (p) (refer to the section "ADJUSTING THE SAFETY CUSHION").
- 2. Pull the entire length of the vehicle's three-point belt out. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the helt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child seat.

- Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".
- 4. Tighten the lap belt by pulling the diagonal belt.
- 5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt quide (x).
- 6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
- 7. Feed the diagonal belt (f) either between the head and shoulder rests (see illustration) or outside along the shoulder rest, depending on how much of the belt length is available. Please always choose the option that uses the least amount of belt length.

SWITCHING FROM PALLAS M-FIX TO SOLUTION M-FIX (ECE GROUP 1 TO ECE GROUP 2/3)

- 1. Remove the safety cushion (p).
- Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
- Press the adjustment button (v) and pull the seat away from the frame (w) completely.

H

>

5

STRAPPING IN USING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

- Now insert the previously adjusted safety cushion (p) (refer to the section "ADJUSTING THE SAFETY CUSHION").
- 2. Pull the entire length of the vehicle's three-point belt out. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child seat.

- Insert the belt tongue (m) into the belt buckle (I). It must lock into place with an audible "CLICK".
- 4. Tighten the lap belt by pulling the diagonal belt.
- Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
- 6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
- 7. Feed the diagonal belt (f) either between the head and shoulder rests (see illustration) or outside along the shoulder rest, depending on how much of the belt length is available. Please always choose the option that uses the least amount of belt length.

STRAPPING IN USING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

- 1. Now insert the previously adjusted safety cushion (p) (refer to the section "ADJUSTING THE SAFETY CUSHION").
- 2. Pull the entire length of the vehicle's three-point belt out. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).

WARNING! Never twist the belt!

WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child seat.


- Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".
- 4. Tighten the lap belt by pulling the diagonal belt.
- 5. Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
- 6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
- 7. Feed the diagonal belt (f) either between the head and shoulder rests (see illustration) or outside along the shoulder rest, depending on how much of the belt length is available. Please always choose the option that uses the least amount of belt length.


SWITCHING FROM PALLAS M-FIX TO SOLUTION M-FIX (ECE GROUP 1 TO ECE GROUP 2/3)

- 1. Remove the safety cushion (p).
- Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
- 3. Press the adjustment button (v) and pull the seat away from the frame (w) completely.


SWITCHING FROM PALLAS M-FIX TO SOLUTION M-FIX (ECE GROUP 1 TO ECE GROUP 2/3)


- 1. Remove the safety cushion (p).
- Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
- Press the adjustment button (v) and pull the seat away from the frame (w) completely.

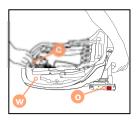

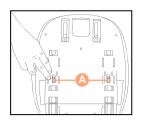



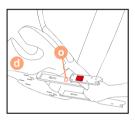

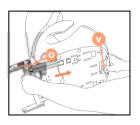







ISOFIX CONNECT modification

- Operate the adjustment lever (c) on the frame (w) and pull the two ISOFIX CONNECT locking arms (o) until there is some resistance.
- Keep the adjustment lever held (c) and release the two snap clips (A) on the underside of the seat elevator (d), one after the other. If necessary, use a screwdriver.

Note! If this is done correctly, the ISOFIX CONNECT locking arms (o) will easily release from the frame (w).

WARNING! Note the minimum drop height of the ISOFIX CONNECT locking arms. Failure to note this may result in damage to components or injury to yourself or other persons nearby.

Now push the ISOFIX CONNECT locking arms (o) into the designated openings on the underside of the seat elevator (d) until there is some resistance.

WARNING! Ensure that the locking arms are installed the right way around and that the teeth of the locking arms are up when inserting them into the seat.

- 7. Operate the adjustment button (v) on the underside of the seat elevator (d) and push the locking arms (o) in as far as they will go.
- 8. For further information on correct installation, please refer to the section "SECURING THE CHILD SEAT USING THE ISOFEX CONNECT SYSTEM"

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

STRAPPING IN WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

 Place your child in the child seat. Pull the three-point belt right out and feed it along the belt buckle (I) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".

2

占

- 4. Operate the adjustment lever (c) on the frame (w) and pull the two ISOFIX CONNECT locking arms (o) until there is some resistance.
- 5. Keep the adjustment lever held (c) and release the two snap clips (A) on the underside of the seat elevator (d), one after the other. If necessary, use a screwdriver

Note! If this is done correctly, the ISOFIX CONNECT locking arms (o) will easily release from the frame (w).

WARNING! Note the minimum drop height of the ISOFIX CONNECT locking arms. Failure to note this may result in damage to components or injury to yourself or other persons nearby.

6. Now push the ISOFIX CONNECT locking arms (o) into the designated openings on the underside of the seat elevator (d) until there is some resistance.

WARNING! Ensure that the locking arms are installed the right way around and that the teeth of the locking arms are up when inserting them into the seat.

- 7. Operate the adjustment button (v) on the underside of the seat elevator (d) and push the locking arms (o) in as far as they will go.
- 8. For further information on correct installation, please refer to the section "SECURING THE CHILD SEAT USING THE ISOFEX CONNECT SYSTEM"

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

ISOFIX CONNECT modification

- 4. Operate the adjustment lever (c) on the frame (w) and pull the two ISOFIX CONNECT locking arms (o) until there is some resistance.
- 5. Keep the adjustment lever held (c) and release the two snap clips (A) on the underside of the seat elevator (d), one after the other. If necessary, use a screwdriver

Note! If this is done correctly, the ISOFIX CONNECT locking arms (o) will easily release from the frame (w).

WARNING! Note the minimum drop height of the ISOFIX CONNECT locking arms. Failure to note this may result in damage to components or injury to yourself or other persons nearby.

6. Now push the ISOFIX CONNECT locking arms (o) into the designated openings on the underside of the seat elevator (d) until there is some resistance.

WARNING! Ensure that the locking arms are installed the right way around and that the teeth of the locking arms are up when inserting them into the seat.

- 7. Operate the adjustment button (v) on the underside of the seat elevator (d) and push the locking arms (o) in as far as they will go.
- 8. For further information on correct installation, please refer to the section "SECURING THE CHILD SEAT USING THE ISOFEX CONNECT SYSTEM"

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

STRAPPING IN WITHOUT THE SAFETY CUSHION - ECE GROUP 2/3 (15-36 KG)

1. Place your child in the child seat. Pull the three-point belt right out and feed it along the belt buckle (I) in front of your child.

WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".

STRAPPING IN WITHOUT THE SAFETY CUSHION - ECE GROUP 2/3 (15-36 KG)


1. Place your child in the child seat. Pull the three-point belt right out and feed it along the belt buckle (I) in front of your child.

 
WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".

 




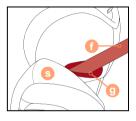







- 3. Next, place the lap belt (n) in the lower belt guides (k) of the child seat.
- 4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (I) must never cross the arm rest. If the belt system is too long, the child seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the shoulder rest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the head rest to change the position of the belt. The height of the head rest (e) can still be adjusted while in the car.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt quide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at an incline downwards.
- the entire belt is tightly against your child's body and is not twisted.

- 3. Next, place the lap belt (n) in the lower belt guides (k) of the child seat.
- 4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (I) must never cross the arm rest. If the belt system is too long, the child seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the shoulder rest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the head rest to change the position of the belt. The height of the head rest (e) can still be adjusted while in the car.

IS YOUR CHILD CORRECTLY SECURED?

To ensure optimum safety for your child, please always check before commencing travel that

- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt guide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at an incline downwards.
- the entire belt is tightly against your child's body and is not twisted.

- 3. Next, place the lap belt (n) in the lower belt guides (k) of the child seat.
- 4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (I) must never cross the arm rest. If the belt system is too long, the child seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the shoulder rest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the head rest to change the position of the belt. The height of the head rest (e) can still be adjusted while in the car.

IS YOUR CHILD CORRECTLY SECURED?


To ensure optimum safety for your child, please always check before commencing travel that


- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt quide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at an incline downwards.
- the entire belt is tightly against your child's body and is not twisted.







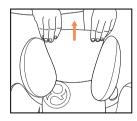

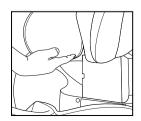



CARE & MAINTENANCE

To ensure that your child seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child seat should be checked regularly for damage. The
 mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

Warning! The child seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

To ensure that your child seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

Warning! The child seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.

CARE & MAINTENANCE

To ensure that your child seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child seat should be checked regularly for damage. The mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

Warning! The child seat must never be used without the cover.

REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.


REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.





 


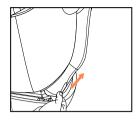










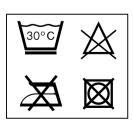

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SEAT SURFACE

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

Warning! Never use harsh cleaning agents or bleaches!

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SEAT SURFACE

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SEAT SURFACE

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

LV EE



REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

Warning! Never use harsh cleaning agents or bleaches!

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

Warning! Never use harsh cleaning agents or bleaches!

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M-fix is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child seat must be removed from the vehicle or covered with a bright cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M-fix is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child seat must be removed from the vehicle or covered with a bright cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M-fix is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child seat must be removed from the vehicle or covered with a bright cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

DISPOSAL

At the end of the child seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies is the product was checked for completeness. manufacturing defects and material defects immediately upon purchase. If the product was purchase by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that original sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

2

占

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies is the product was checked for completeness. manufacturing defects and material defects immediately upon purchase. If the product was purchase by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that original sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies is the product was checked for completeness, manufacturing defects and material defects immediately upon purchase. If the product was purchase by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that original sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.



Dear customer,

Thank you for choosing the CYBEX Pallas M-fix child seat. Safety, comfort and ease of use were the foremost principles applied to the development of the CYBEX Pallas M-fix child seat. This product is manufactured subject to special quality assurance measures and satisfies the most stringent of safety requirements.





Approval

Cybex PALLAS M-fix

Seat elevator with back rest and head rest on an adjustable base frame with height-adjustable safety cushions.

Recommended for:

Age: Approx. 9 months to 4 years

Weight: 9-18 kg

Only suitable for vehicle seats with automatic three-point belts approved in accordance with ECE regulation R16 or a comparable standard ECE R-44/04.

CYBEX PALLAS M-fix - group 1, 9 to 18 kg
CYBEX SOLUTION M-fix - group 2/3, 15 to 36 kg

TR


Contents


Warning! To ensure optimum protection for your child, the CYBEX PALLAS M-fix must be used as described in these instructions.

Note! Always keep these instructions to hand (e.g. in the designated compartment on the rear of the back rest).

Note! Country-specific regulations (e.g. regarding colour-coding on child seats) may mean that product features may vary in appearance. This will, however, not affect the product in its correct function.


Brief instructions Group 1 (9-18 kg)	2
Brief instructions Group 2/3 (15-36 kg)	3
Approval	66
Positioning the seat correctly in the vehicle	68
Securing the child seat using the ISOFIX CONNECT system	70
Activating the L.S.P	72
Removal of the CYBEX PALLAS M-fix	
Placing the seat in the vehicle	74
Adapting to body size	76
Removing the additional seat insert	76
Adjusting the safety cushion – ECE group 1 (9-18 kg)	76
Seated and lying position – ECE group 1 (9-18 kg)	78
nclinable head rest	78
Strapping in using the safety cushion – ECE group 1 (9-18 kg)	80
Switching from Pallas M-fix to Solution M-fix (ECE group 1 to ECE group 2/3)	80
Strapping in without the safety cushion – ECE group 2/3 (15-36 kg)	82
s your child correctly secured?	84
Care & maintenance	86
Removing the seat cover	86
Removing the cover from the headrest flap	86
Removing the cover from the head support	86
Removing the cover from the shoulder part	88
Removing the cover from the seat surface	88
Removing the cover from the safety cushion	88
Cleaning	88
How to act following an accident	90
Product service life	90
Disposal	90
Narranty conditions	92

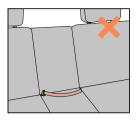

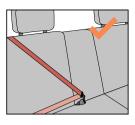





 



POSITIONING THE SEAT CORRECTLY IN THE VEHICLE

The CYBEX PALLAS M-fix with retracted ISOFIX CONNECT system can be used on all vehicle seats with automatic three-point safety belts approved for the transport of adult persons.

WARNING! The seat is not suitable for use with a two-point or lap belt. If the seat is secured using a two-point belt, an accident may result in severe or even fatal injuries to the child.



A 'semi-universal' approval is provided for fixtures using ISOFIX CONNECT locking arms (o). For this reason, ISOFIX CONNECT can only be used in ISOFIX certain vehicles. Please refer to the enclosed vehicle type list for approved vehicles. You can obtain the most up-to-date version from

www.cvbex-online.com.

In exceptional cases, the child seat may also be used on the front passenger seat. Please note the following in this case:


- In cars with airbags, you should push the passenger seat back as far as possible. When doing so, however, ensure that the upper pivot point of the safety belt is behind the belt feed point of the child seat.
- Always comply with the recommendations of the vehicle manufacturer.


WARNING! The diagonal belt (f) must run back at an incline and must never run forward to the upper belt point in your vehicle. If it is not possible to adjust the seat in this way, e.g. by pushing the car seat forward or using it on another seat, this child seat is not suitable for your vehicle.


Luggage or other objects present in the vehicle that may cause injury in the event of an accident must always be firmly secured. Otherwise, they may be thrown, causing fatal injuries.

 
WARNING! The child seat may not be used on car seats facing to the side of the direction of travel. Use of the child seat is permitted on rear-facing seats, e.g. in a van or minibus, provided that the seat is permitted for transporting an adult. Please note that the vehicle head rest must not be removed when fitting on a rear-facing seat! Even if not in use, the child seat must always be secured with the safety belt. This applies even if the child set has already been secured to the vehicle using the ISOFIX CONNECT system. An unsecured child seat can injure other passengers and yourself even when just performing an emergency brake or in the event of a minor collision.


Note! Never leave your child unattended in the vehicle.

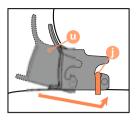

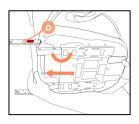


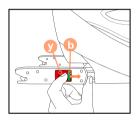



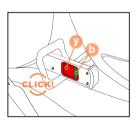



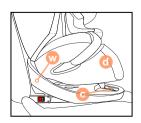

SECURING THE CHILD SEAT USING THE ISOFIX CONNECT SYSTEM



Using the ISOFIX-CONNECT system, you can fix the CYBEX PALLAS M-fix to the vehicle, thereby increasing your child's safety. Your child will still be secured using the three-point belt of your vehicle.

 Insert the supplied feed-in aids (u) with the longer strap upwards into the two ISOFIX fixture points (j). In some vehicles, it is better to mount the feed-in aids (u) in the opposite direction.

Note! The ISOFIX fixture points (j) are two metallic clips for each seat and are positioned between the back rest and the seating surface of the vehicle seat. In case of doubt, please refer to the driver's manual of your vehicle.

- Use the adjustment lever (c) under the seat cushion (d) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- Pull the two ISOFIX-CONNECT locking arms (o) as far as they will go.
- Now twist the ISOFIX-CONNECT locking arms (o) 180° so that they are facing the direction of the feed-in aids (u).


Note! Before joining the ISOFIX-CONNECT locking arms (o) with the ISOFIX fixture points (j), check the release buttons (y). If the green safety indicators (b) are visible, you must first release the ISOFIX-CONNECT locking arms before joining by pressing and pulling back the release button. Repeat the process if necessary with the second locking arm.


A perceptible click will be heard when the ISOFIX-CONNECT locking arm correctly locks in place with ISOFIX fixture points.


- Push the two locking arms (o) into the feed-in aids (u) until these lock into place in the ISOFIX fixture points with an audible 'click'.
- Ensure that the seat is secure by trying to pull it out of the feed-in aids (u).
- The green safety indicator (b) must now be clearly visible on the two red release buttons (y).
- You can now use the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat position.


Note! Note the information in the section "Placing the seat in the vehicle".

 
 You can now strap in your child; refer to the section "STRAPPING IN USING SAFETY CUSHION".

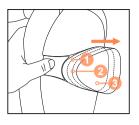

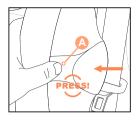

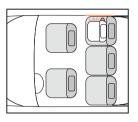

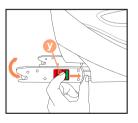



ACTIVATING THE L.S.P.

The "Linear Side Protection" system (L.S.P.) can be extended in two steps by pressing the L.S.P. button(s). Together with the initial position, this provides a total of three different L.S.P. settings.

Note! Always activate the L.S.P. on the side of the seat facing the car door (see illustration).

To push the L.S.P. back into the housing, press the L.S.P. button again and push the L.S.P. back into the starting position.

REMOVAL OF THE CYBEX PALLAS M-FIX

Perform the installation steps in the reverse order.




- release buttons (y) and pulling them back simultaneously. ISOFIX • Pull the seat out of the feed-in aids (u).

 - Rotate the locking arms (o) 180°.
- Operate the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix and push the locking arms in as far as they will go.

· Unlock the ISOFIX locking arms (o) on both sides by pushing the red

Note! By folding in the locking arms (o), you are not just protecting the vehicle seat but also the locking arms of the ISOFIX CONNECT system from dirt and damage.



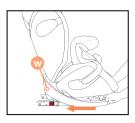





PLACING THE SEAT IN THE VEHICLE

Place the child seat on the appropriate seat in the car.




- Always ensure that the entire surface of the back rest (a) of the CYBEX PALLAS M-fix is placed fully against the back rest of the vehicle seat. The child seat must never be in a lying position. If necessary, you can adjust the distance using the adjustment lever (c) on the frame (w) of the CYBEX PALLAS M-fix child seat.
- If the head rest of the vehicle is in the way, pull it out all the way, turn it away
 or remove it completely (for exceptions to this, please refer to the section
 "POSITIONING THE SEAT CORRECTLY IN THE VEHICLE") The back rest (a) will
 perfectly adapt to practically any incline of the vehicle seat.


WARNING! The full surface of the back rest of the CYBEX child seat must be against the back rest of the vehicle. To ensure maximum protection for your child, the seat must be in a normal upright position!

Note! On some car seats made of sensitive materials (e.g. suede, leather etc.), the use of child seats may leave marks and/or cause discolouration. To prevent this, you can place a blanket or towel underneath it, for example. Please also refer to in this connection to our cleaning instructions in these usage instructions; these cleaning instructions must be observed prior to using the seat for the first time.



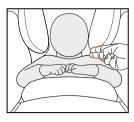



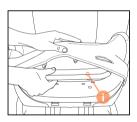



ADAPTING TO BODY SIZE

In order to optimally adapt the CYBEX PALLAS M-fix to your child's body size, a seat insert (i) has been provided as standard and is already inserted under the seat cover.

- We recommend using this additional seat insert (i) for children aged 9 to 24 months
- From the age of 2 onwards, the seat insert (i) is no longer necessary.
- The seat can then be adjusted to your child's body simply by using the adjustable head rest (e). To do this, pull the adjustment level (h) upwards to unlock the head rest (e).
- Adjust it so that there is space for two fingers between the lower edge of the head rest (e) and the shoulder of the child.

Note! Only an optimally adjusted head rest (e) can offer your child maximum protection and comfort while ensuring that the diagonal belt can be fitted smoothly (f). The height of the CYBEX PALLAS M-fix can be adjusted to one of twelve positions.

REMOVING THE ADDITIONAL SEAT INSERT

- 1. Release the front push buttons of the seat cover from the seat cushion (d).
- 2. Pull the fabric cover from the cover guides up and forward until you can pull out the seat insert.
- 3. The seat insert must be removed in accordance with the age specifications stated above.
- 4. Pull the seat cover to its original state and fix it in place again.


ADJUSTING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)


By pushing the central adjustment button (z), you can adapt the safety cushion to your child. Hold down the central adjustment button (z) while you adapt the safety cushion to your child.

The side flaps of the safety cushion (p) fit exactly between the arm rests and seat surface (d) and are used to support the safety cushion (p) on the seat.


Adjust the safety cushion (p) so that it is against the child but is not pushing against the child's body.

WARNING! The safety cushion (p) may only be used in conjunction with the frame (w) up to a maximum of 18 kg!

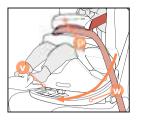

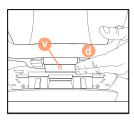



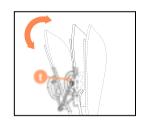





SEATED AND LYING POSITION - ECE GROUP 1 (9-18 KG)

To bring the CYBEX PALLAS M-fix to a lying position, the vehicle's own belt system does not need to be opened.

 If your child falls asleep during travel, simply press the adjustment button (v) on the underside of the seat cushion (d), and the CYBEX PALLAS M-fix will slide downwards using your child's weight.

WARNING! An adjustment of the lying position by the driver is prohibited while travelling!

 To restore the upright seat position from the lying position once the child is out of the seat, press the adjustment button (v) again and apply light pressure against the seat cushion (d) to guide the child seat back up.

WARNING! Always ensure that the adjustment button (v) gives an audible click when locking into the lying or seated position. The lying position is only available for group 1 (9-18 kg) in the Pallas configuration with safety cushion (p) and base frame (w).

Note! Ensure that the lap belt (n) and diagonal belt (f) are always tight.

INCLINABLE HEAD REST

The inclinable head rest helps to prevent the child's head from dangerously tipping forward during sleep. In the event of a collision, the head rest will follow the movement of your child's head forwards, lock into place and absorb the subsequent backwards motion of your child's head.


Note! Ensure that your child's head is always in contact with the inclinable head rest (r), as this is the only way that the head rest can provide optimum protection from side collisions.

 
The incline angle of the head rest can be set to one of three positions. It can be moved forward without moving the lever to the second or third position until the rest locks into position. To return it to the original position, the lever must be operated and the head rest pulled back.


WARNING! Never block the locking mechanism (t) using objects! In the event of an accident, the incline adjustment mechanism must move smoothly, or else your child may be injured!







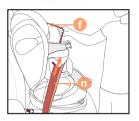




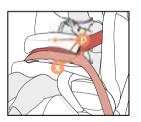

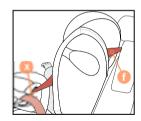

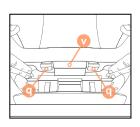

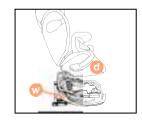

STRAPPING IN USING THE SAFETY CUSHION – ECE GROUP 1 (9-18 KG)

- 1. Now insert the previously adjusted safety cushion (p) (refer to the section "ADJUSTING THE SAFETY CUSHION").
- 2. Pull the entire length of the vehicle's three-point belt out. Take the lap belt (n) and place it in the designated belt guide (x) in the safety cushion (p).


WARNING! Never twist the helt!


WARNING! The three-point belt may only be inserted into the guides designated for that purpose. The belt guides are described precisely in this manual and are also marked red on the child seat.

- Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".
- 4. Tighten the lap belt by pulling the diagonal belt.
- Now feed the diagonal belt (f) in parallel with the lap belt (n) back into the belt guide (x).
- 6. Pull the diagonal belt (f) tight and ensure that both parts of the belt cover the entire width of the safety cushion (p) in the belt guide (x).
- 7. Feed the diagonal belt (f) either between the head and shoulder rests (see illustration) or outside along the shoulder rest, depending on how much of the belt length is available. Please always choose the option that uses the least amount of belt length.


SWITCHING FROM PALLAS M-FIX TO SOLUTION M-FIX (ECE GROUP 1 TO ECE GROUP 2/3)


- 1. Remove the safety cushion (p).
- Press the two release buttons (q) on the underside of the seat cushion (d) and pull it away from the frame until there is some resistance.
- Press the adjustment button (v) and pull the seat away from the frame (w) completely.

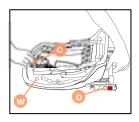

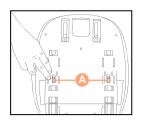




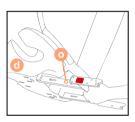

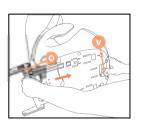



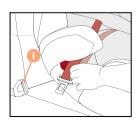



ISOFIX CONNECT modification

- Operate the adjustment lever (c) on the frame (w) and pull the two ISOFIX CONNECT locking arms (o) until there is some resistance.
- Keep the adjustment lever held (c) and release the two snap clips (A) on the underside of the seat elevator (d), one after the other. If necessary, use a screwdriver.

Note! If this is done correctly, the ISOFIX CONNECT locking arms (o) will easily release from the frame (w).

WARNING! Note the minimum drop height of the ISOFIX CONNECT locking arms. Failure to note this may result in damage to components or injury to yourself or other persons nearby.

Now push the ISOFIX CONNECT locking arms (o) into the designated openings on the underside of the seat elevator (d) until there is some resistance.

WARNING! Ensure that the locking arms are installed the right way around and that the teeth of the locking arms are up when inserting them into the seat.

- 7. Operate the adjustment button (v) on the underside of the seat elevator (d) and push the locking arms (o) in as far as they will go.
- 8. For further information on correct installation, please refer to the section "SECURING THE CHILD SEAT USING THE ISOFEX CONNECT SYSTEM"

Note! Keep removed parts together in a safe and secure place.

WARNING! When reassembling the seat, proceed in precisely the reverse order. Use the instructions to check beforehand if all parts are present.

STRAPPING IN WITHOUT THE SAFETY CUSHION – ECE GROUP 2/3 (15-36 KG)

 
 Place your child in the child seat. Pull the three-point belt right out and feed it along the belt buckle (I) in front of your child.

 
WARNING! Never twist the belt.

2. Insert the belt tongue (m) into the belt buckle (l). It must lock into place with an audible "CLICK".













- 3. Next, place the lap belt (n) in the lower belt guides (k) of the child seat.
- 4. Now pull the diagonal belt (f) firmly to tighten the lap belt (n). The tighter the belt sits, the better it provides protection from injury. On the side of the belt buckle (l), the diagonal belt (f) and the lap belt (n) must be inserted together in the lower belt guide (k).

WARNING! The vehicle belt buckle (I) must never cross the arm rest. If the belt system is too long, the child seat is not suitable for use in this position in the vehicle. In case of doubt, please consult the manufacturer of your vehicle.

5. The lap belt (n) should have been fed through the lower belt guides (k) on both sides of the seat cushion (d).

Note! Teach your child from the start to always ensure that the belt is tight and, if necessary, how to tighten the belt themselves.

WARNING! The lap belt (n) must run as low as possible on both sides along your child's groin to have optimum effect in the event of an accident.

6. Now feed the diagonal belt (f) through the upper belt guide (g) in the shoulder rest (e) until it is inside the belt guide.

Ensure that the diagonal belt (f) runs between the outside of the shoulder and the neck of your child. If necessary, adjust the height of the head rest to change the position of the belt. The height of the head rest (e) can still be adjusted while in the car.

IS YOUR CHILD CORRECTLY SECURED?


To ensure optimum safety for your child, please always check before commencing travel that


- the lap belt (n) has been fed through the lower belt guides (k) on both sides of the seat cushion (d).
- the diagonal belt (f) on the belt buckle side has also been fed through the lower belt quide (k) of the seat.
- the diagonal belt (f) has been fed through the belt guide (g) marked red in the shoulder rest (e).
- the diagonal belt (f) is at an incline downwards.
- the entire belt is tightly against your child's body and is not twisted.







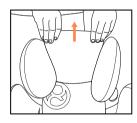

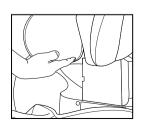



CARE & MAINTENANCE

To ensure that your child seat provides maximum protection, it is imperative that you note the following:

- All major parts of the child seat should be checked regularly for damage. The
 mechanical components must be free of defects.
- It is absolutely necessary to ensure that the child seat is not jammed between hard elements such as the vehicle door or seat rail, which could potentially damage it.
- When exposed to extreme shock, e.g. after a crash, the child seat must be checked by the manufacturer.

Ensure that only an original CYBEX seat cover is used, as the cover is a key element of the seat's function. Spare covers can be obtained from a specialist retailer.

REMOVING THE SEAT COVER

The cover of the infant seat consists of four parts (Headrest flap, headrest, shoulder part cover, booster cover and/or seat surface cover). This is complemented by the safety cushion cover.

The four covers of the seat are fitted into the cover attachment channels on the edge of the infant seat and are held in position at several places by press-studs (see image).

Once all studs have been released, the single parts of the cover can be removed from the cover attachment channels.

In order to put the covers back on the seat, proceed in the reversed order as removing them.

Warning! The child seat must never be used without the cover.


REMOVING THE COVER FROM THE HEADREST FLAP

Pull the opening of the cover over the adjustment lever so that the cover does not get jammed on the lever when pulling it up to remove it.

REMOVING THE COVER FROM THE HEAD SUPPORT

Release the two press-studs at each side of the rear of the shoulder area. Pull the cover out of the cover attachment channel.




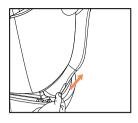








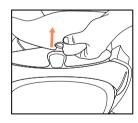

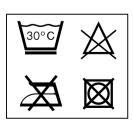

REMOVING THE COVER FROM THE SHOULDER PART

Pull the cover out of the cover attachment channel.

REMOVING THE COVER FROM THE SEAT SURFACE

Release the four press-studs of the seat cover at the front and the back. Now, pull off the cover over the armrests and along the seat surface.

REMOVING THE COVER FROM THE SAFETY CUSHION

First, release the two press-studs of the safety cushion cover. Then pull off the cover around the cushion towards the third attachment around the central adjustment button and release the cover at the rubber eyelet of the adjustment button.

CLEANING

Note! The cover may only be washed at 30°C with a delicate wash program. Washing at more than 30°C may result in discolouration of the cover fabric. Please wash the cover separately from other laundry and do not dry in the dryer! Never dry the cover in direct sunlight! The plastic parts can be cleaned with a mild cleaning agent and warm water.

Warning! Never use harsh cleaning agents or bleaches!

HOW TO ACT FOLLOWING AN ACCIDENT

WARNING! An accident may cause damage to the child seat that is not identifiable with the naked eye. Please replace the seat after an accident. In case of doubt, please consult your dealer or the manufacturer.

PRODUCT SERVICE LIFE

The CYBEX PALLAS M-fix is designed to meet its specifications for the entire service life of approximately 11 years. However, as there can be very large temperature fluctuations and unpredictable strains in vehicles, the following points must be observed:

- If the vehicle is directly exposed to sunlight for a longer time, the child seat must be removed from the vehicle or covered with a bright cloth.
- Regularly check all plastic and metal parts of the seat for damage, deformation or change of colour. If you discover any changes, the child seat must be disposed or checked and possibly replaced by the manufacturer.
- Changes to fabric, especially bleaching, are perfectly normal when used in a vehicle and do not impair the seat's function.

DISPOSAL

At the end of the child seat's service life, it must be disposed of correctly. The separation of waste may be handled differently from place to place. To ensure that the child seat is disposed of in accordance with regulations, please contact your local waste disposal institution or local council. Always observe the waste disposal regulations of your country.

WARRANTY CONDITIONS

The following warranty conditions only apply to the country in which this product was first sold through retail channels to a consumer. This warranty covers all manufacturing and material defects that existed at the time of purchase or which manifest themselves within three (3) years of first sale of this product via retail channels to a consumer (manufacturer warranty). If a manufacturing or material defect arises during the warranty period, the product will be repaired at no charge or – at our discretion – may be replaced by a new one. In order to make a claim on this warranty, the product must be returned to the retailer that first sold it and the original proof of purchase (receipt or invoice), containing the date of purchase, name and address of the retailer, and the product name, must be presented. No claims may be made on this warranty if the product is sent to the manufacturer or any other person than the retailer having first sold it for the purpose of making a claim on the warranty. The warranty only applies is the product was checked for completeness. manufacturing defects and material defects immediately upon purchase. If the product was purchase by way of a mail order outlet, it must be checked for completeness, manufacturing defects and material defects immediately upon receipt. If damage arises, the product may no longer be used and must be returned to the retailer that original sold it. When claiming on the warranty, the product must be returned in a complete and clean state. Please read the usage instructions carefully before contacting the retailer. The warranty does not cover damage caused by misuse, external influences (water, fire, traffic accidents etc.) or normal wear and tear. Claims on the warranty will only be honoured if the product is treated and used in accordance with the usage instructions, repairs and modifications are only performed by persons authorised to do so, and only original parts and accessories are used. This warranty does not nullify or limit in any way any consumer rights or rights against the seller based on infringement of the purchase agreement granted by applicable legislation.



