



MONTAJE DE CO -1413- 1415

ASSEMBLING OF THE CO -1413- 1415 MOHTAJ CO-1413-1415
 MONTAGEM DO CO -1413- 1415 MONTAGE VON CO -1413- 1415
 MONTERING AV CO -1413- 1415 MONTAGGIO DI CO -1413- 1415



A x1

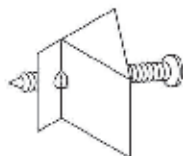


B x 12



C x 4




D x 1



E x 24




F x 24

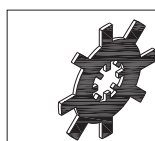


M x 6

A-1412




x 6

A-1414






x 6






N x 6

- E** IMPORTANTE: GUARDAR PARA FUTURAS CONSULTAS. LEER ATENTAMENTE.
GB IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.
F ATTENTION: GARDER POUR CONSULTER AU FUTUR.
RU ВАЖНО: ВНИМАТЕЛЬНО ИЗУЧИТЕ И СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ
D WICHTIG: BITTE NEHMEN SIE BEIM ZUSAMMENBAU NUR BEZUG AUF DIESEN KATALOG. GRÜNDLICH LESEN
S VIKTIGT: SPARA DENNA INSTRUKTION FÖR FRAMTIDA BEHOV.
I IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.



MICUNA S.L. PROL. C/ DE LA ALBUFERA, S/N. 46430 SOLLANA (VALENCIA) APTO. 67
 46460 SILLA (VALENCIA) [http: www.micuna.com](http://www.micuna.com)

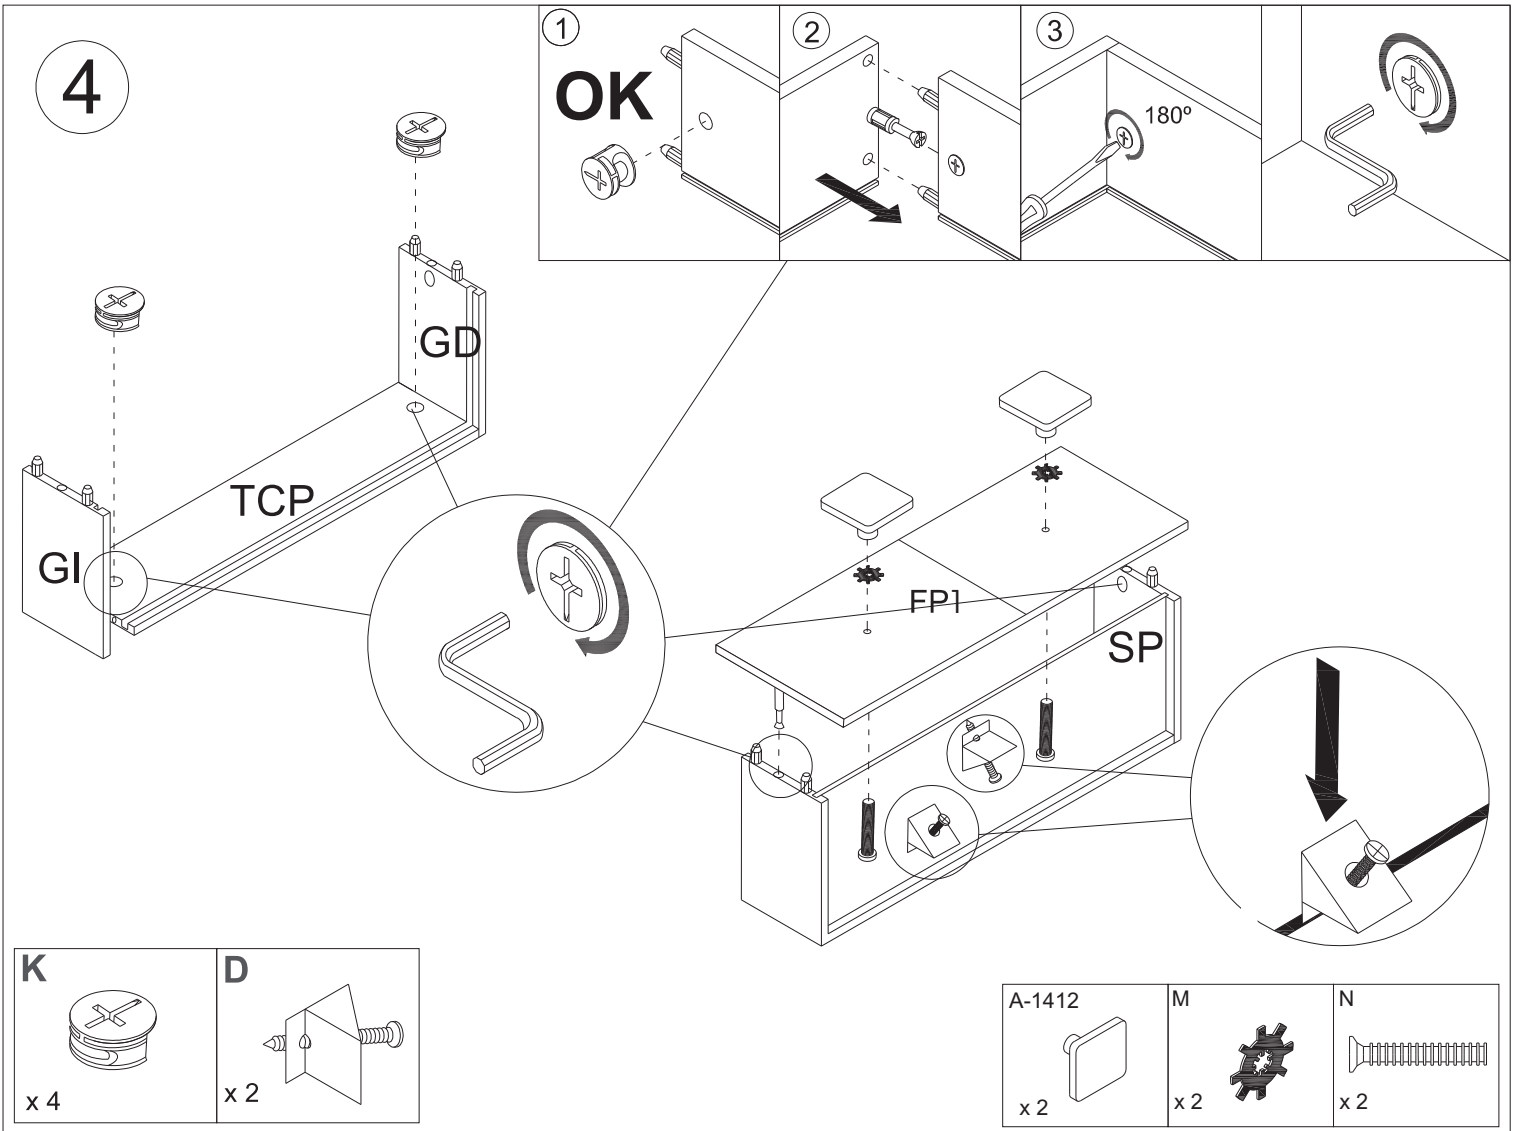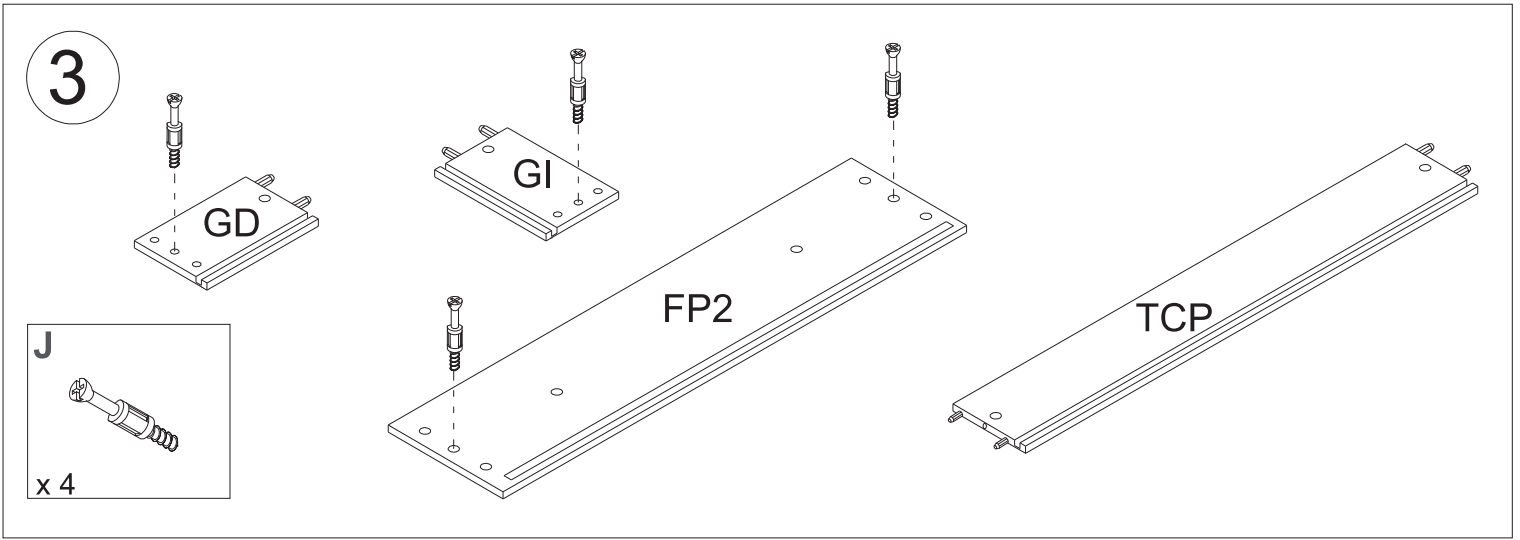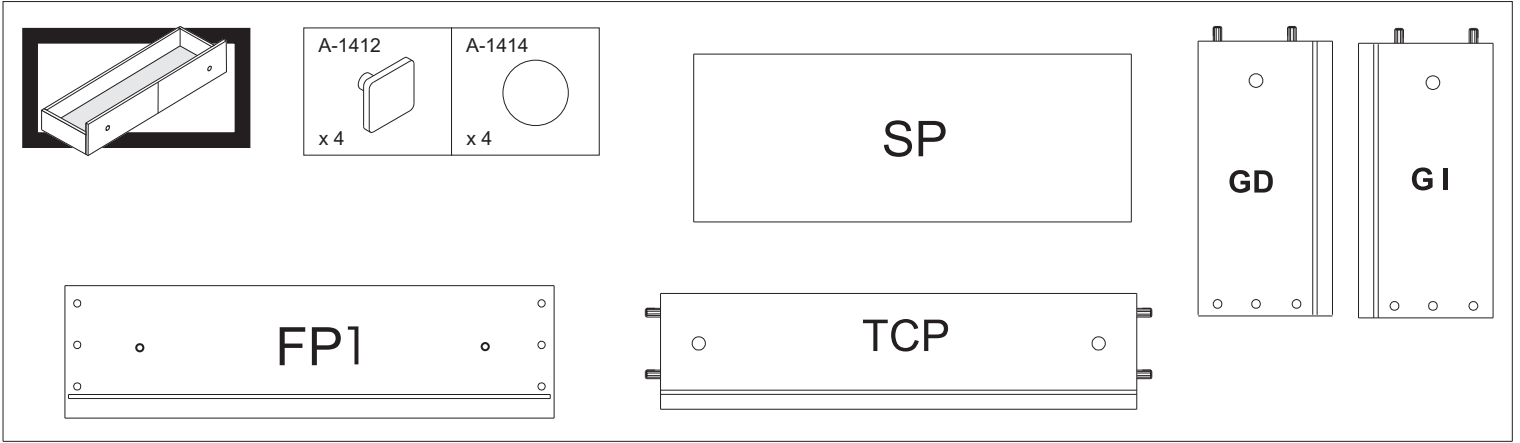

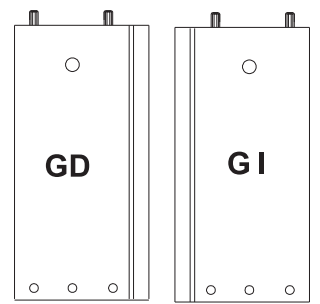
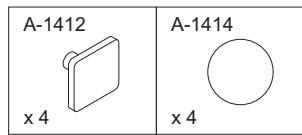
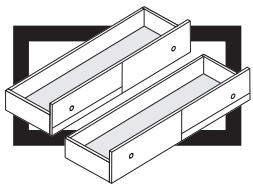





x 2

3

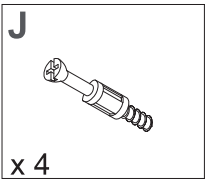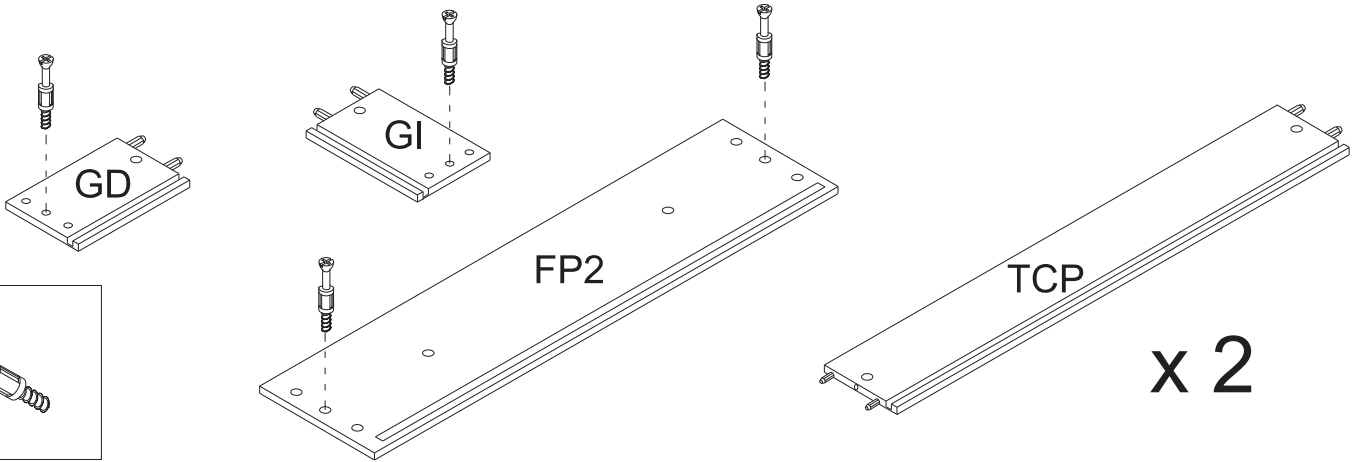


4

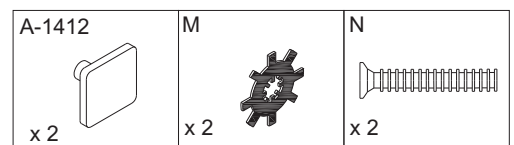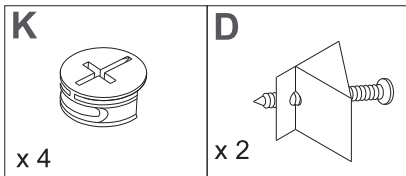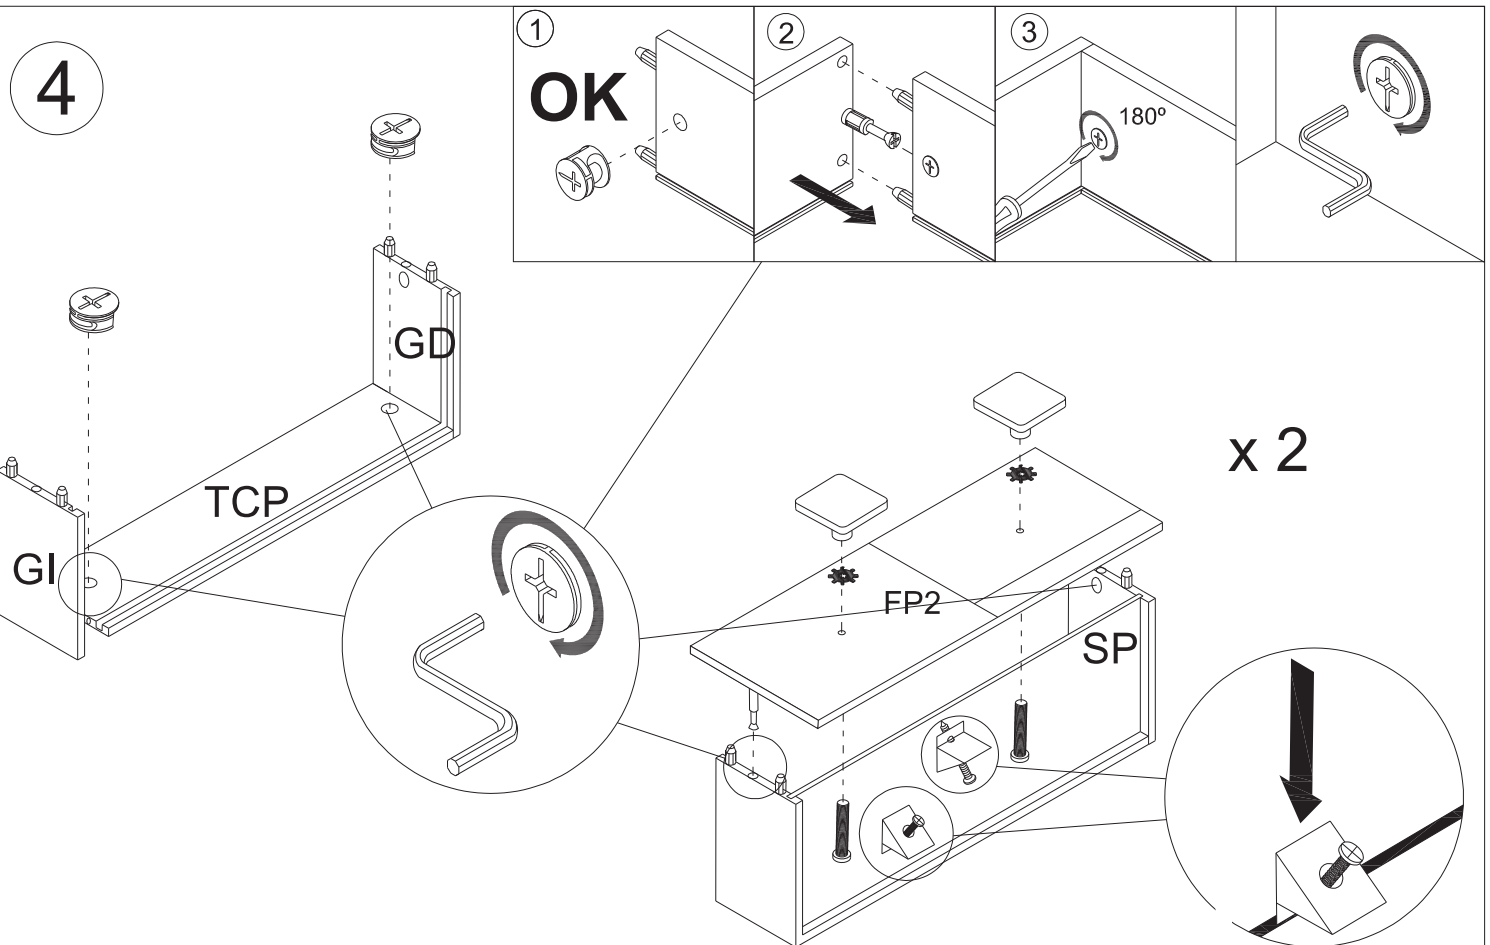


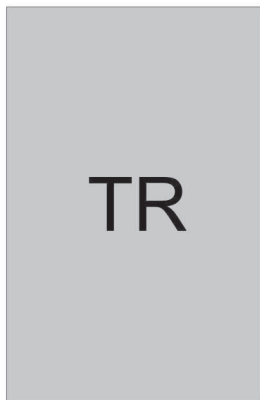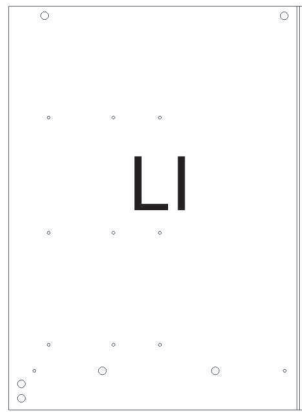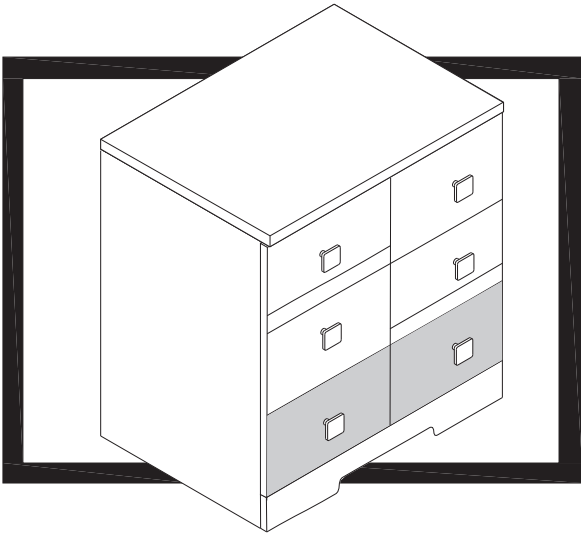

x2

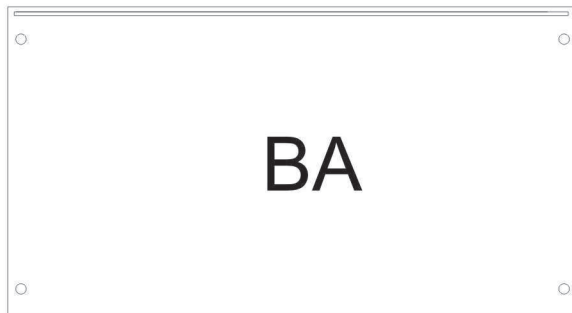

1

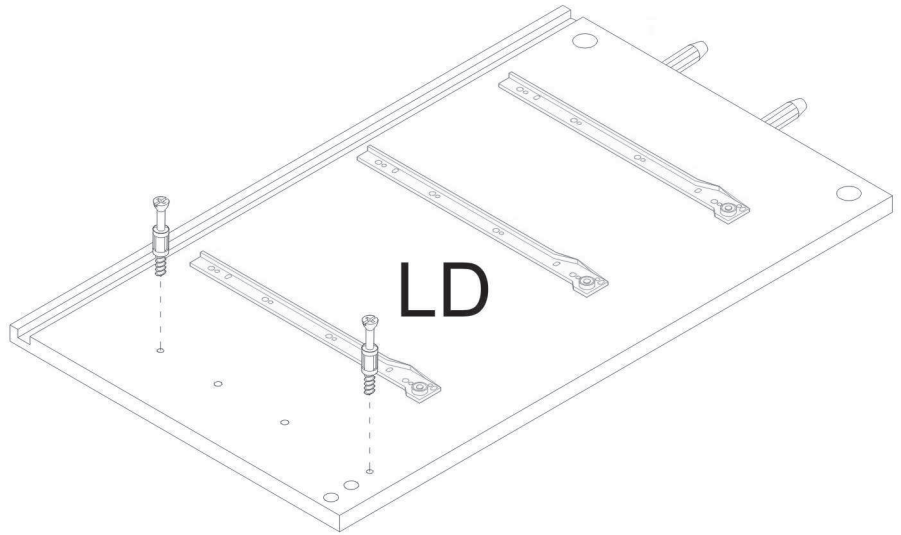


E



x 2

2

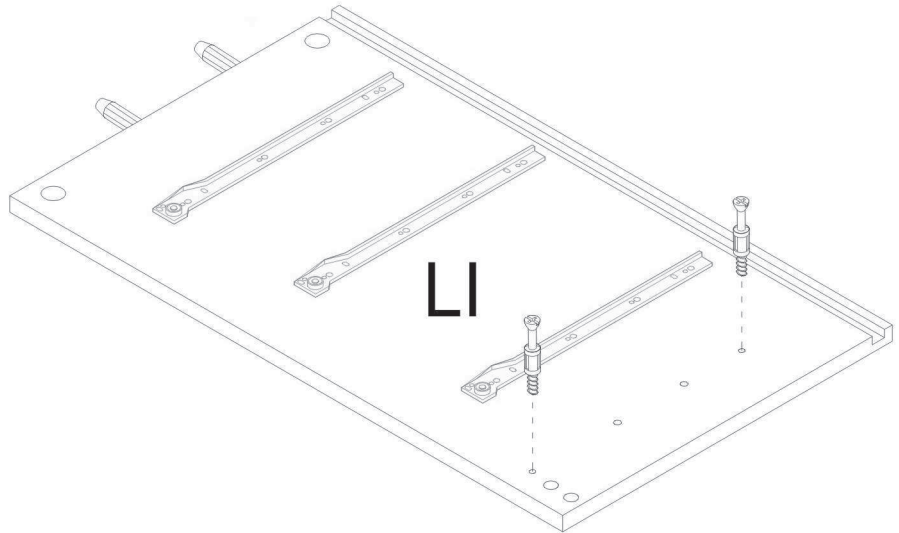


E




x 2

3



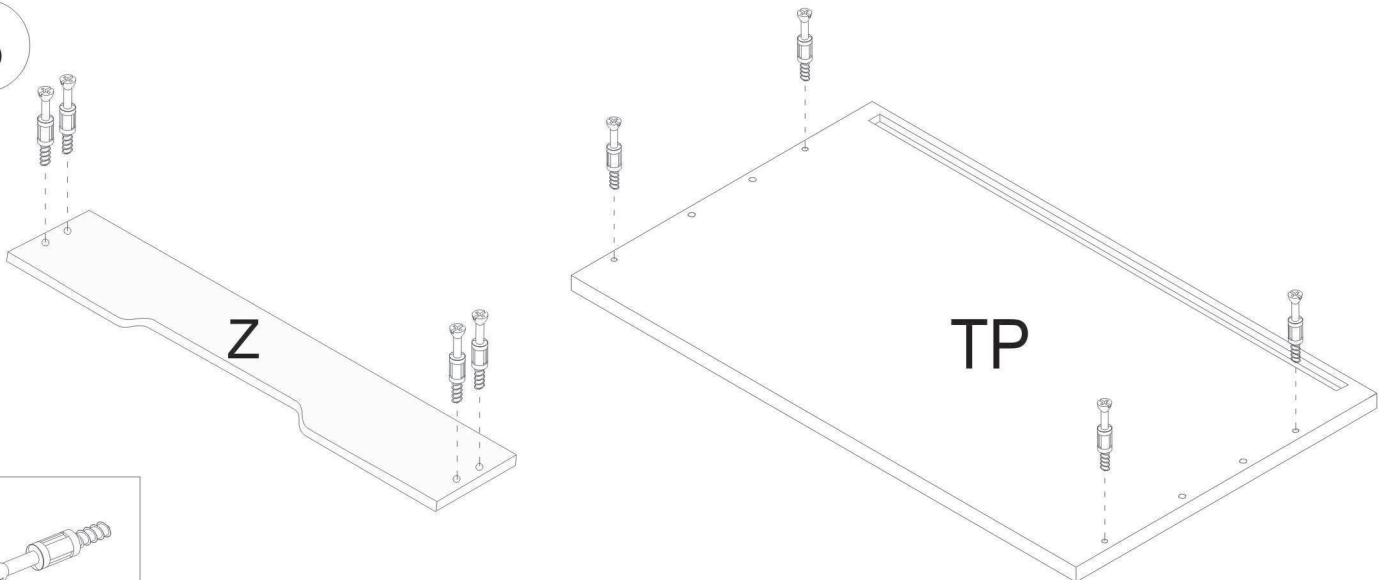


E






x 8



4

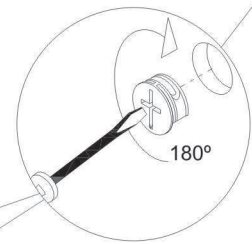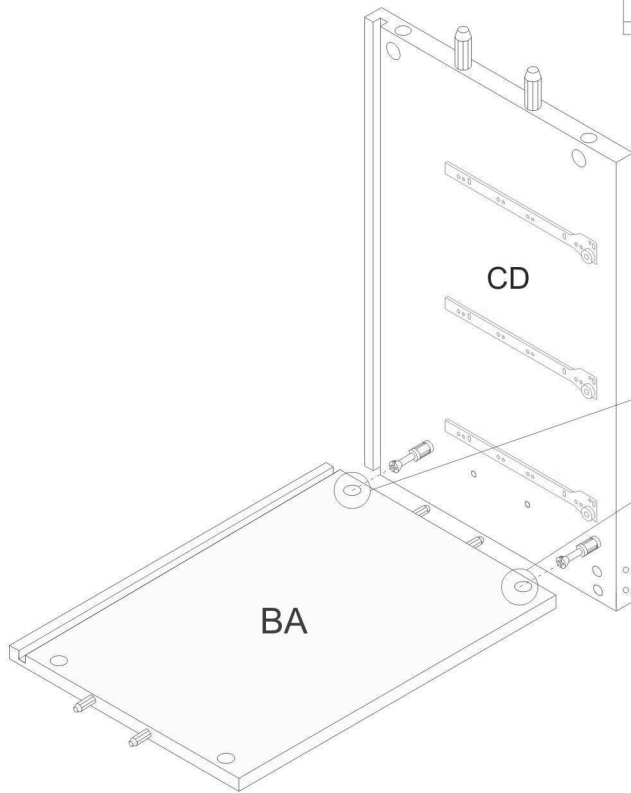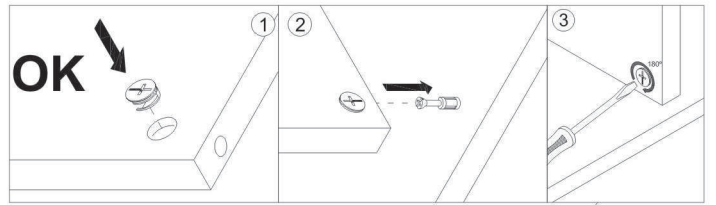





5

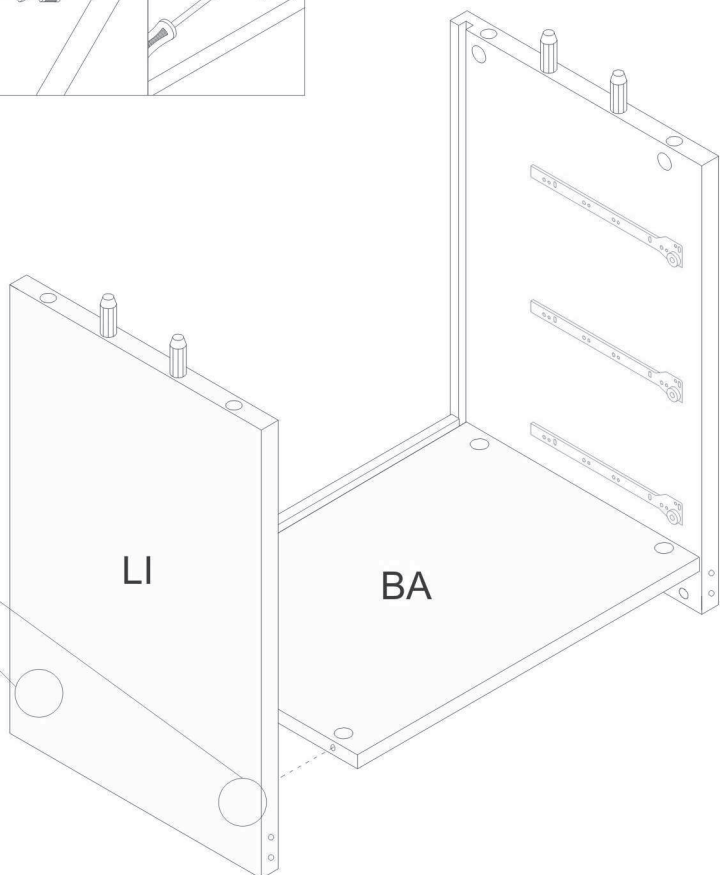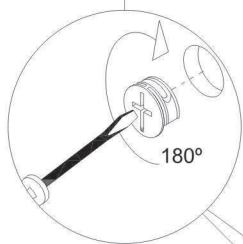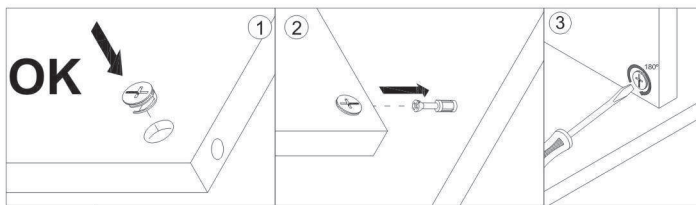




6

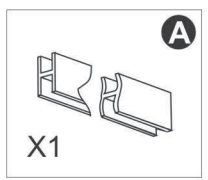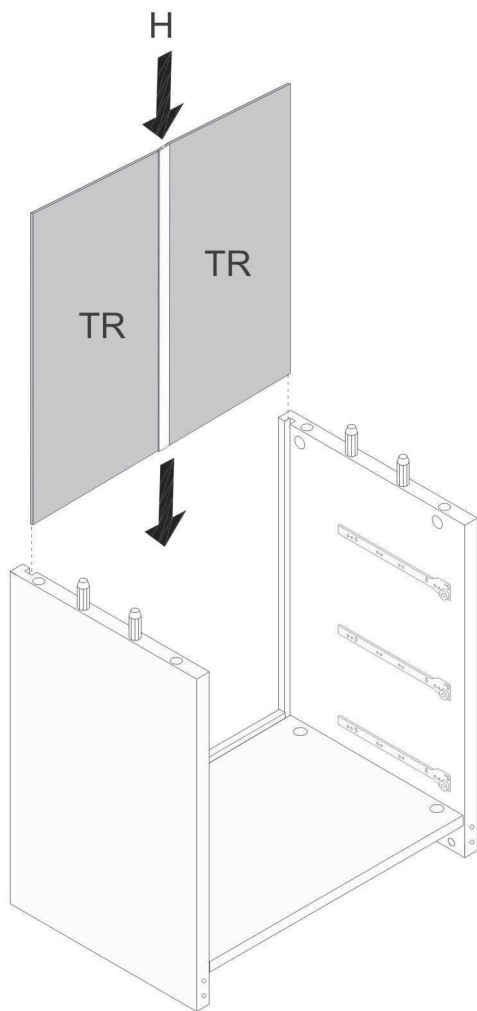





7

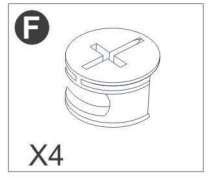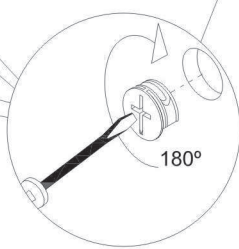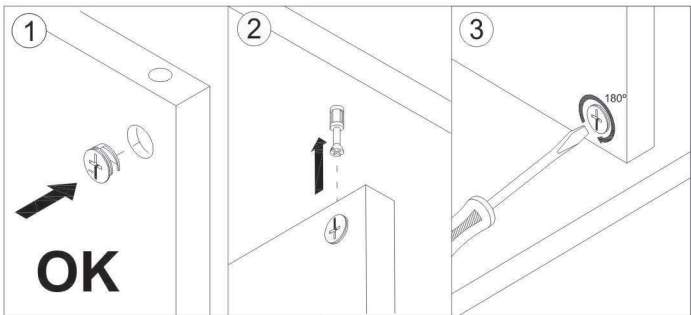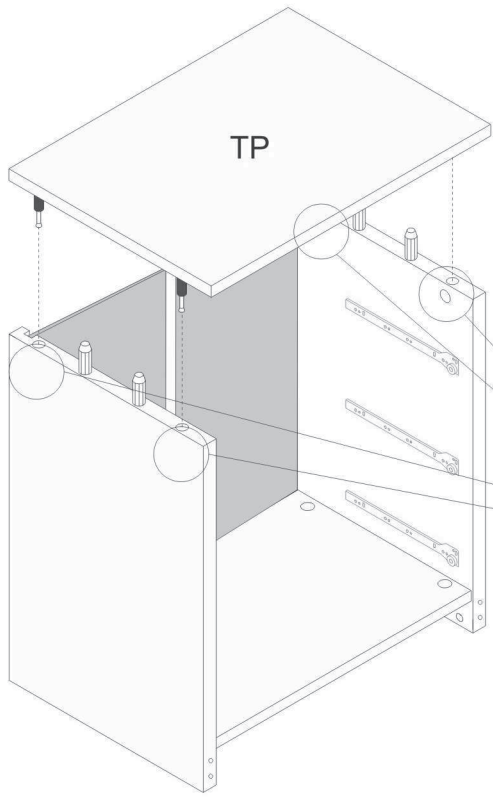

8

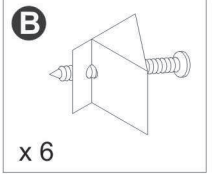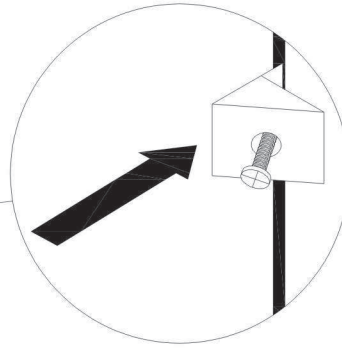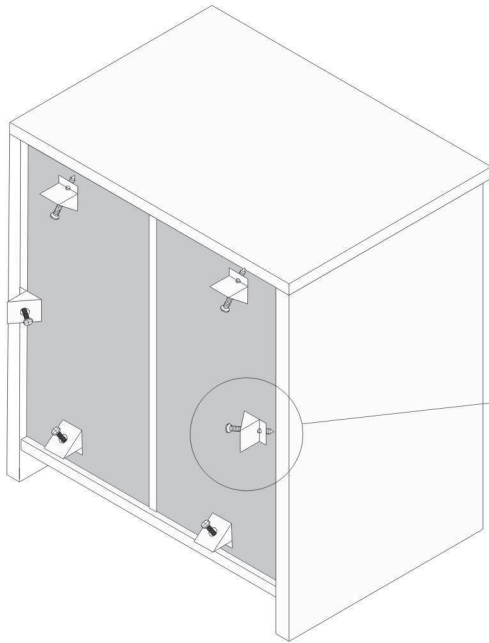

9

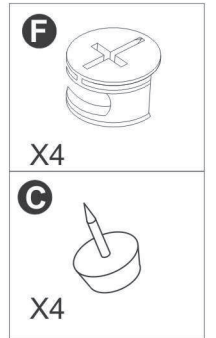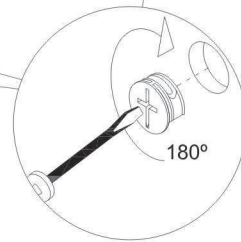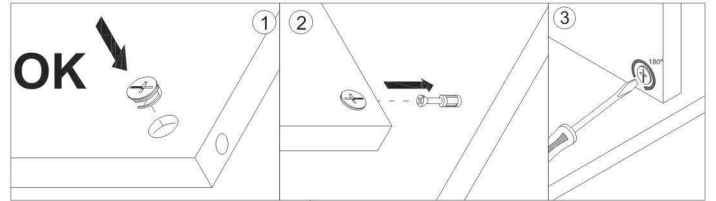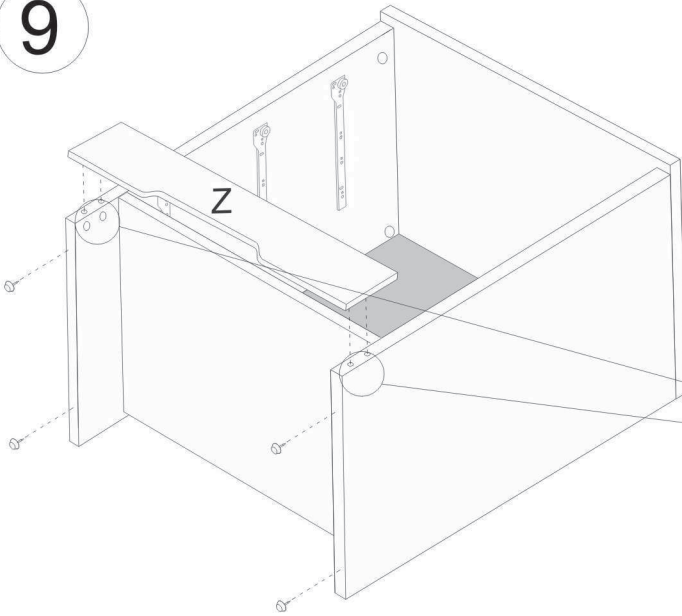

10

