
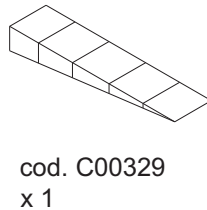
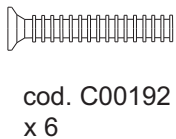
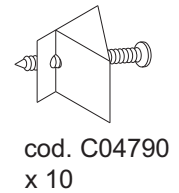
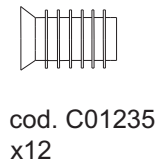
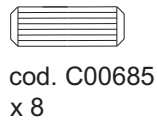
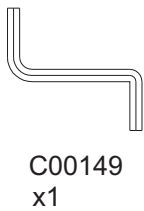
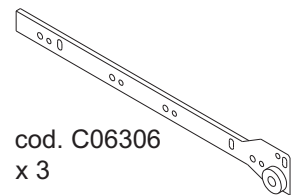
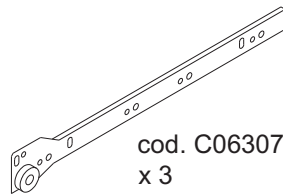
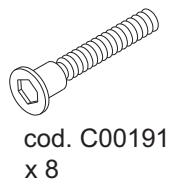
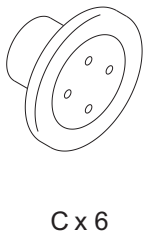

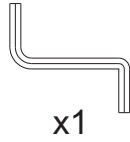


MONTAJE DE CO-1472




ASSEMBLING OF THE CO-1472
MONTAGEM DO CO-1472
MONTERING AV CO-1472


MONTAGE DU CO-1472
MONTAGE VON CO-1472
MONTAGGIO DI CO-1472

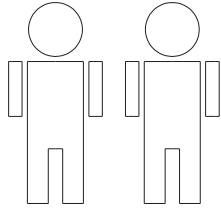





- E** IMPORTANTE: GUARDAR PARA FUTURAS CONSULTAS. LEER ATENTAMENTE.
- GB** IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.
- F** ATTENTION: GARDER POUR CONSULTER AU FUTUR.
- P** IMPORTANTE: GUARDAR PARA FUTURAS CONSULTAS. LER ATENTAMENTE.
- D** WICHTIG: BITTE NEHMEN SIE BEIM ZUSAMMENBAU NUR BEZUG AUF DIESEN KATALOG. GRÜNDLICH LESEN.
- S** VIKTIGT: SPARA DENNA INSTRUKTION FÖR FRAMTIDA BEHOV.
- I** IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.

MICUNA S.L. PROL. C/ DE LA ALBUFERA, S/N. 46430 SOLLANA (VALENCIA) APTO. 67
46460 SILLA (VALENCIA) [http: www.micuna.com](http://www.micuna.com)

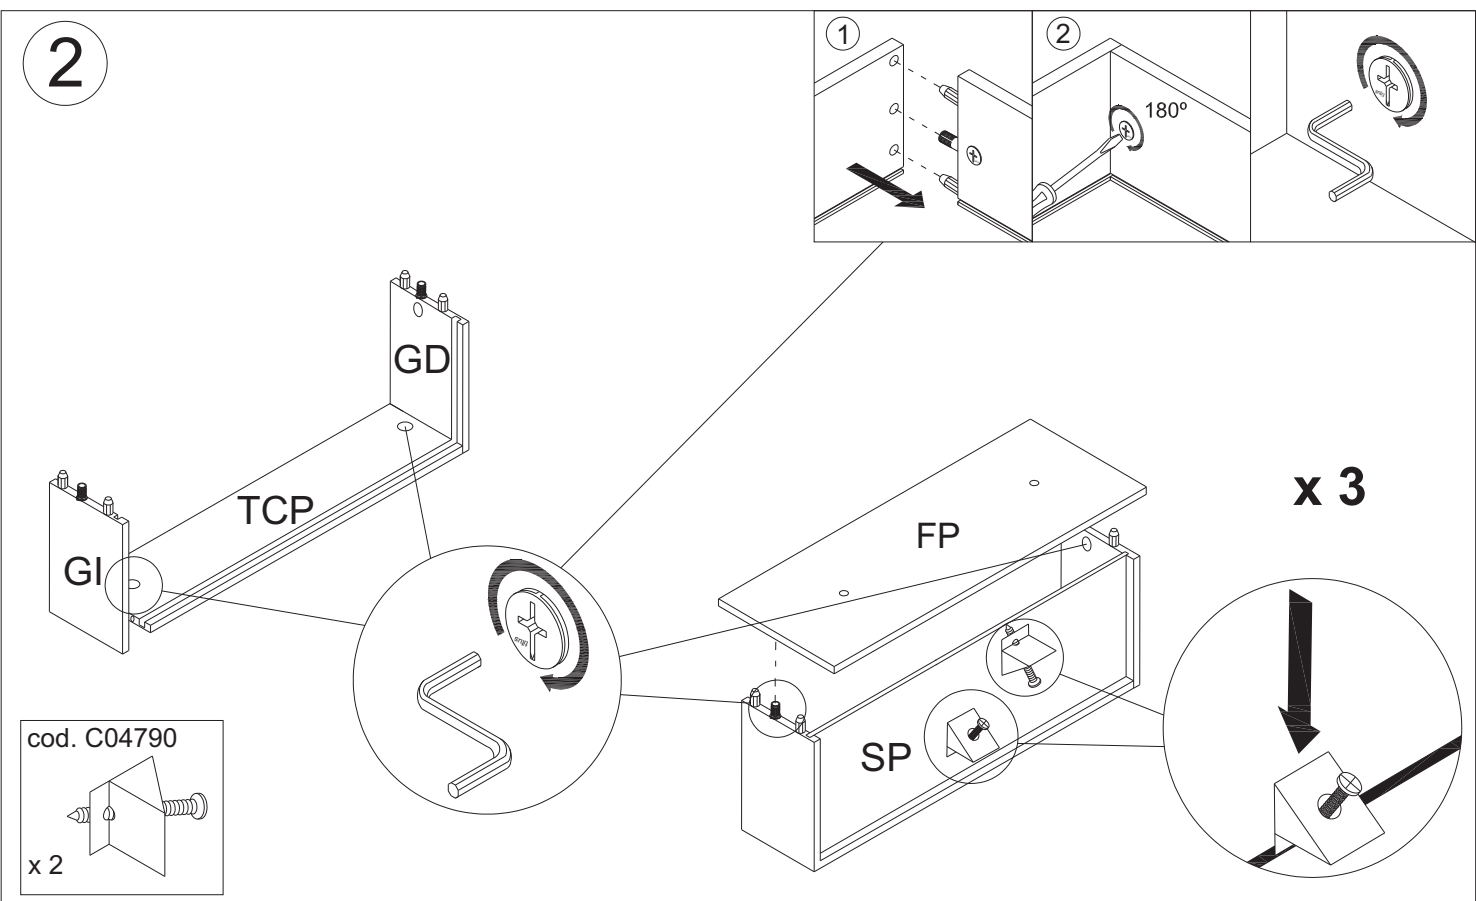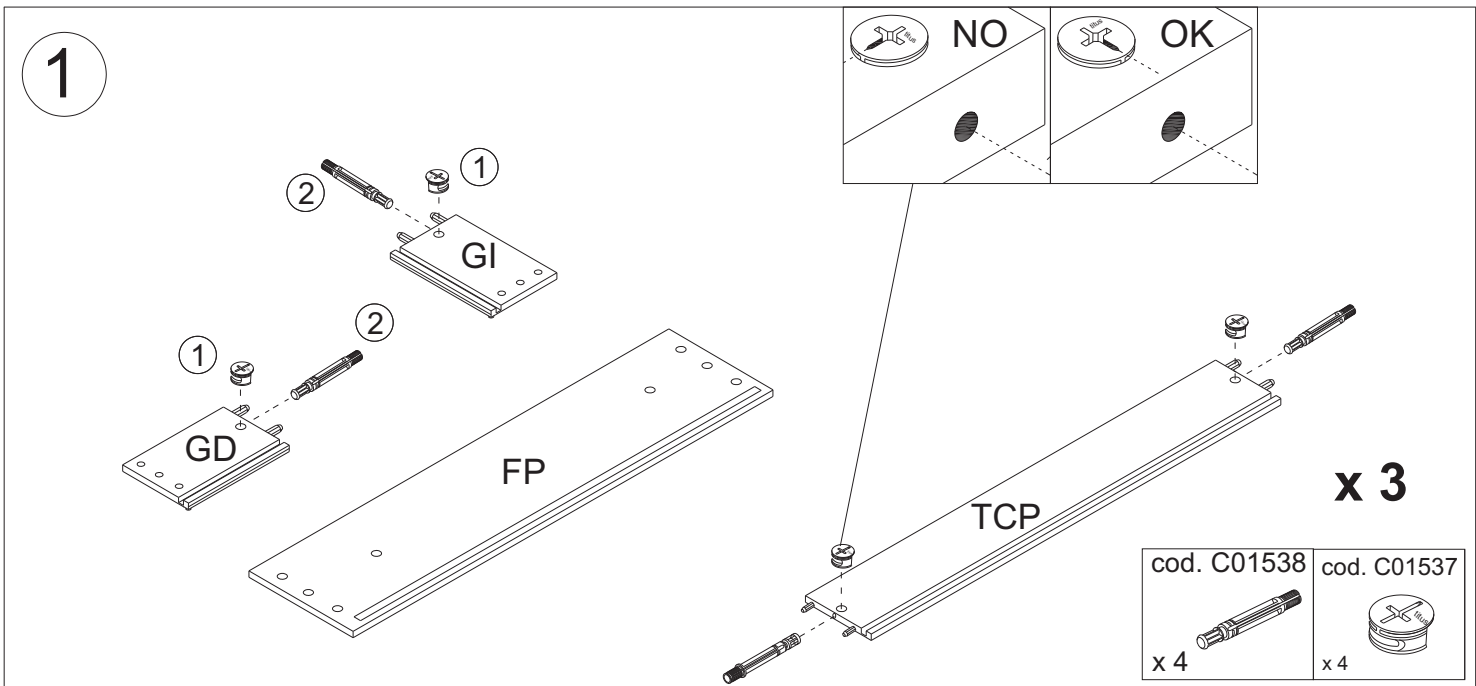
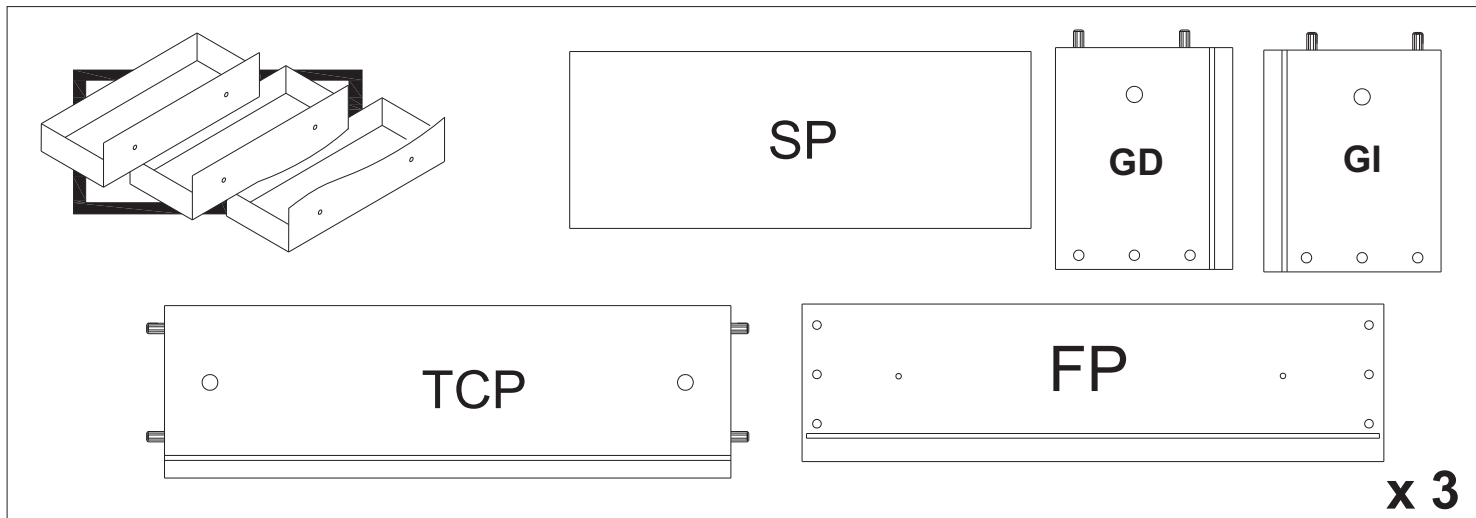


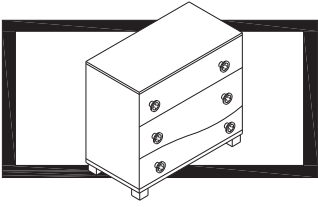




X

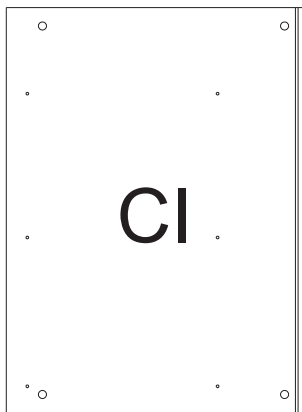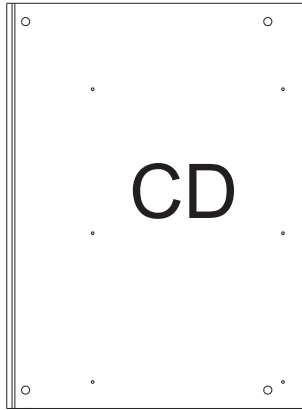


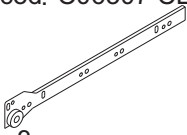
PA_{x4}

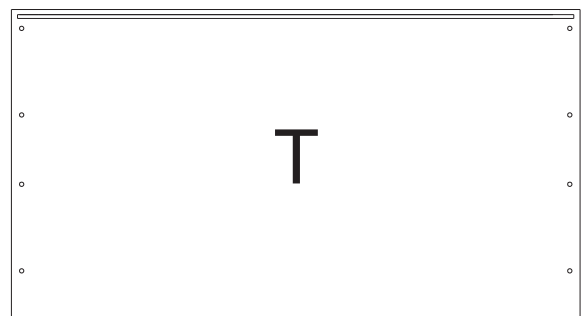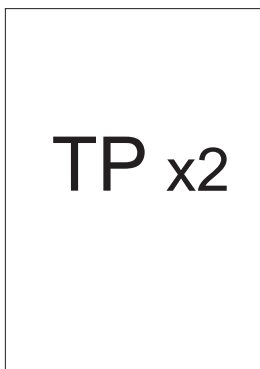



1

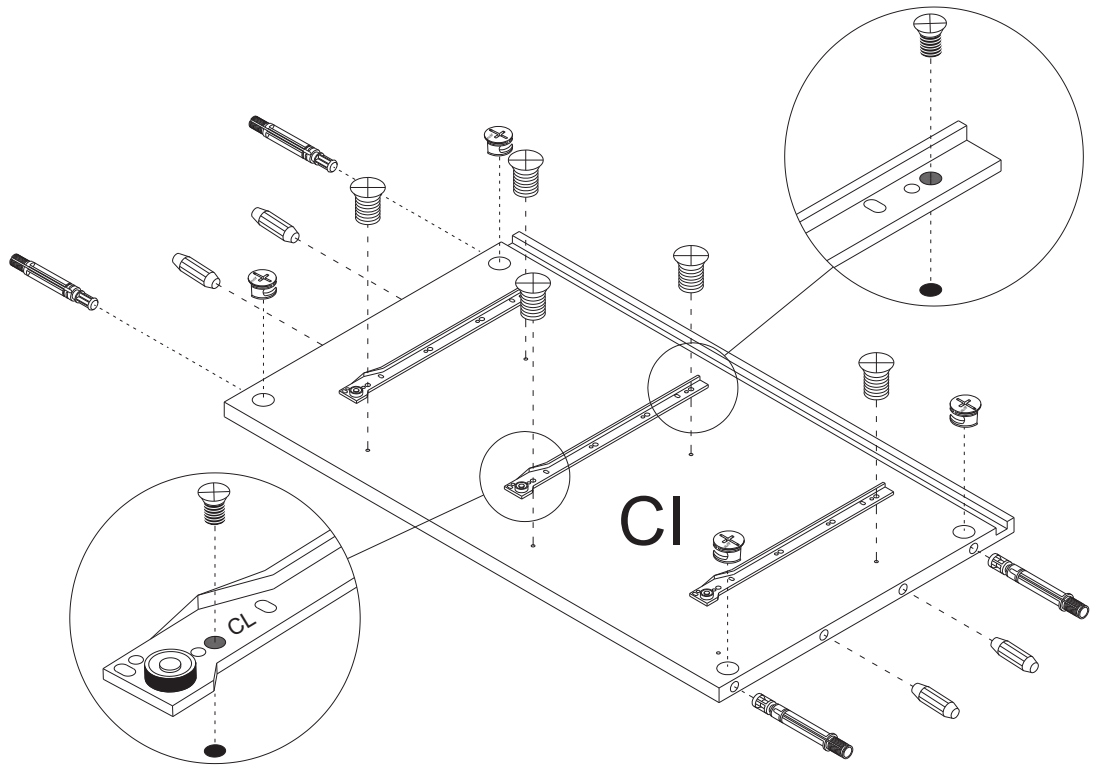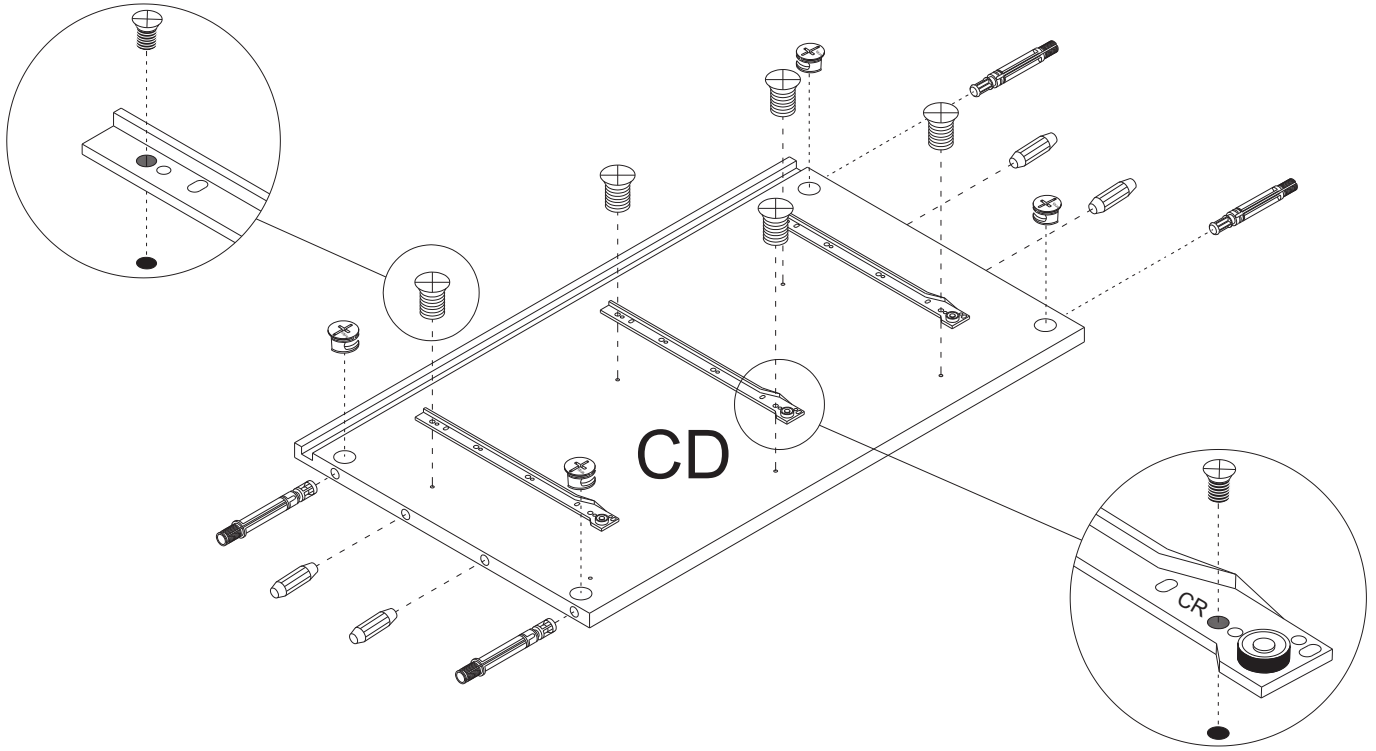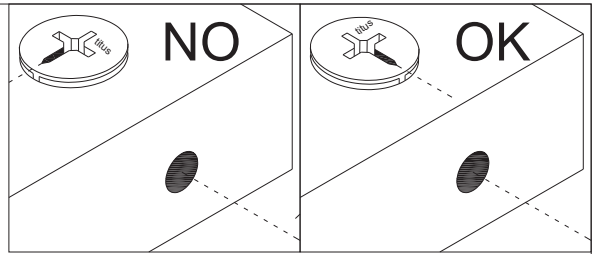



cod. C01537

 x 8

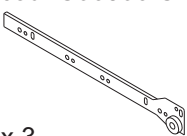cod. C06307 CL

 x 3



cod. C06306 CR

 x 3

cod. C01235

 x 10

cod. C00685

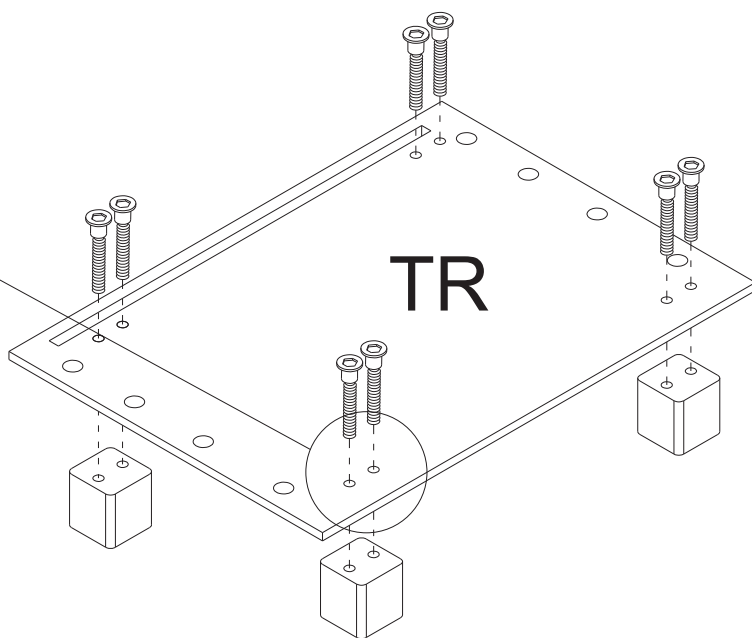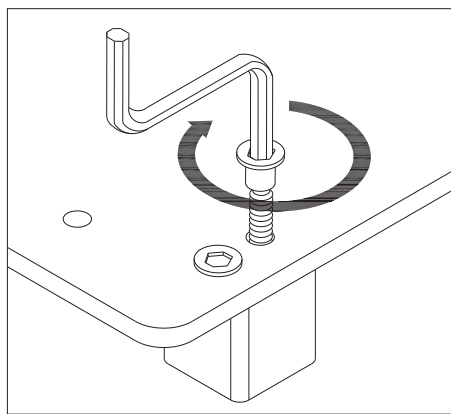 x 8


cod. C01538

 x 8

2




cod. C00191

PA





x 8





x4




3

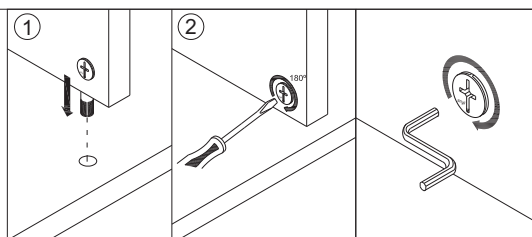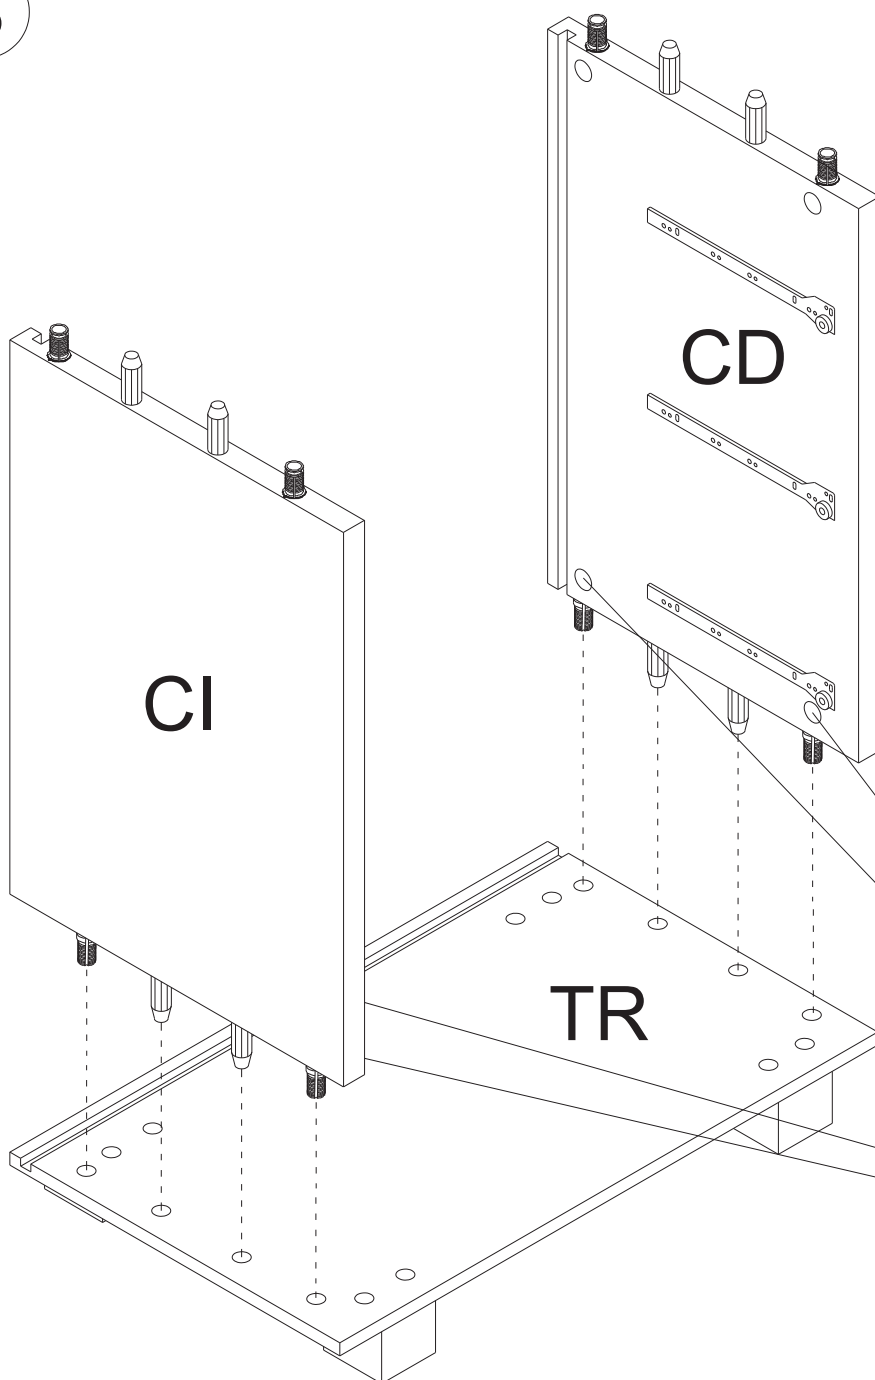




180°

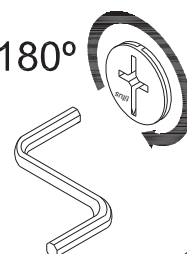

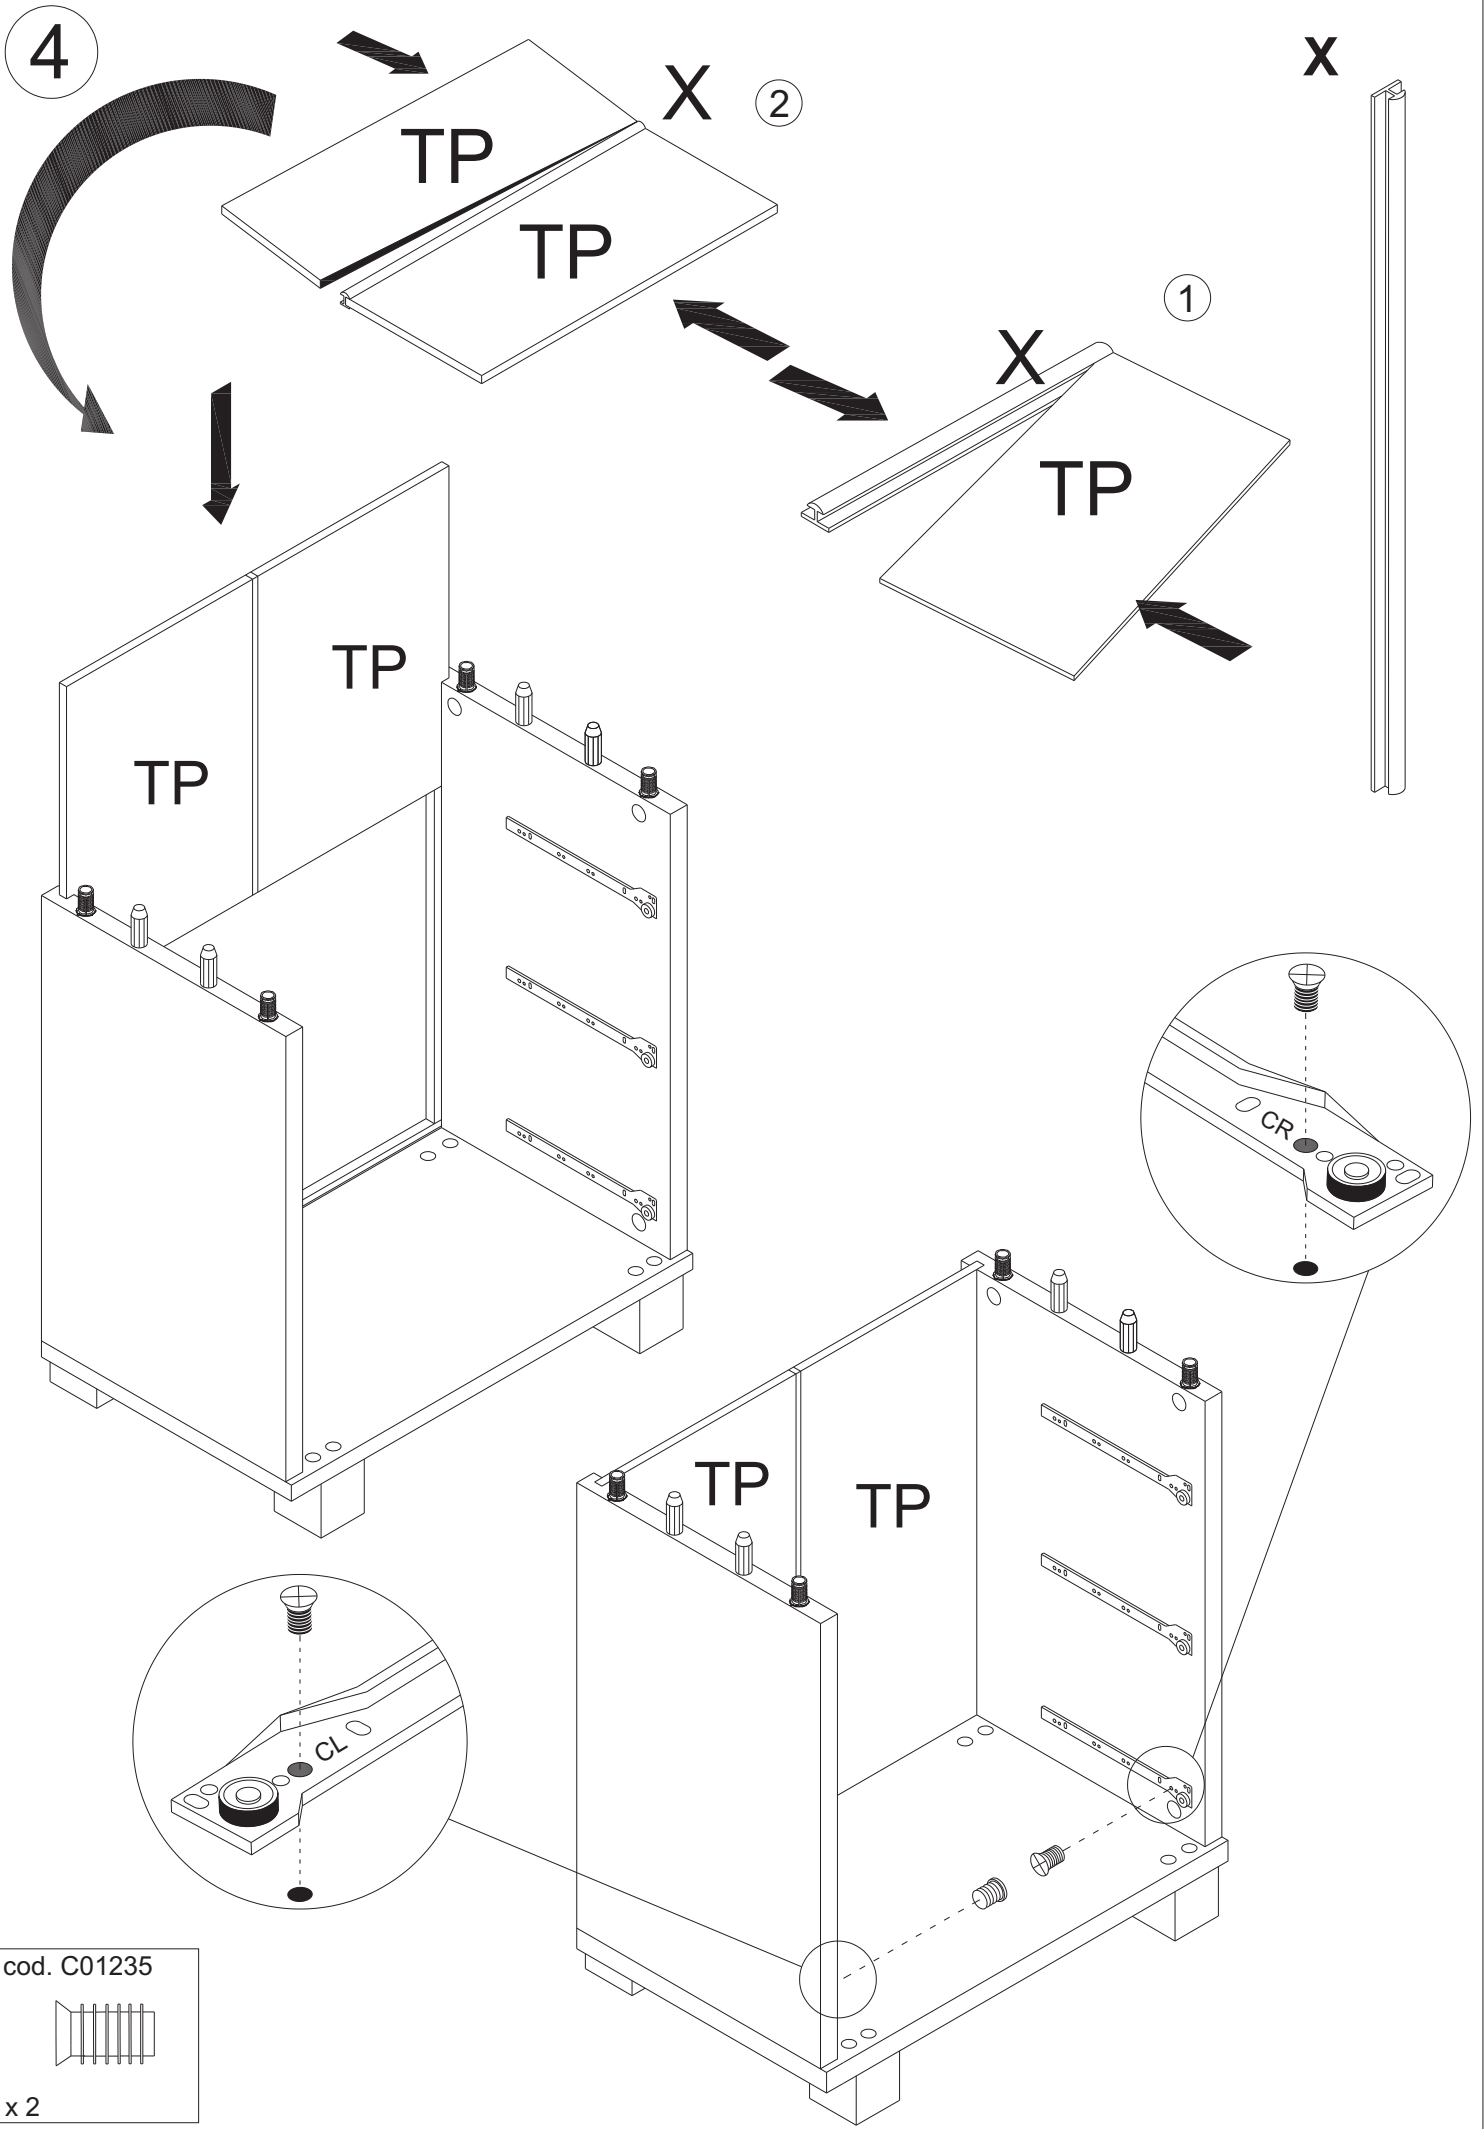


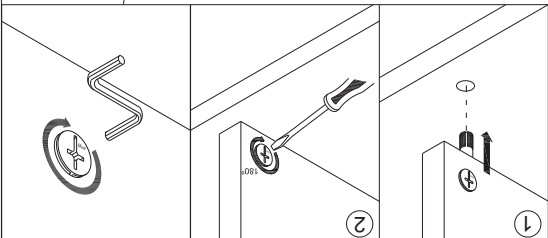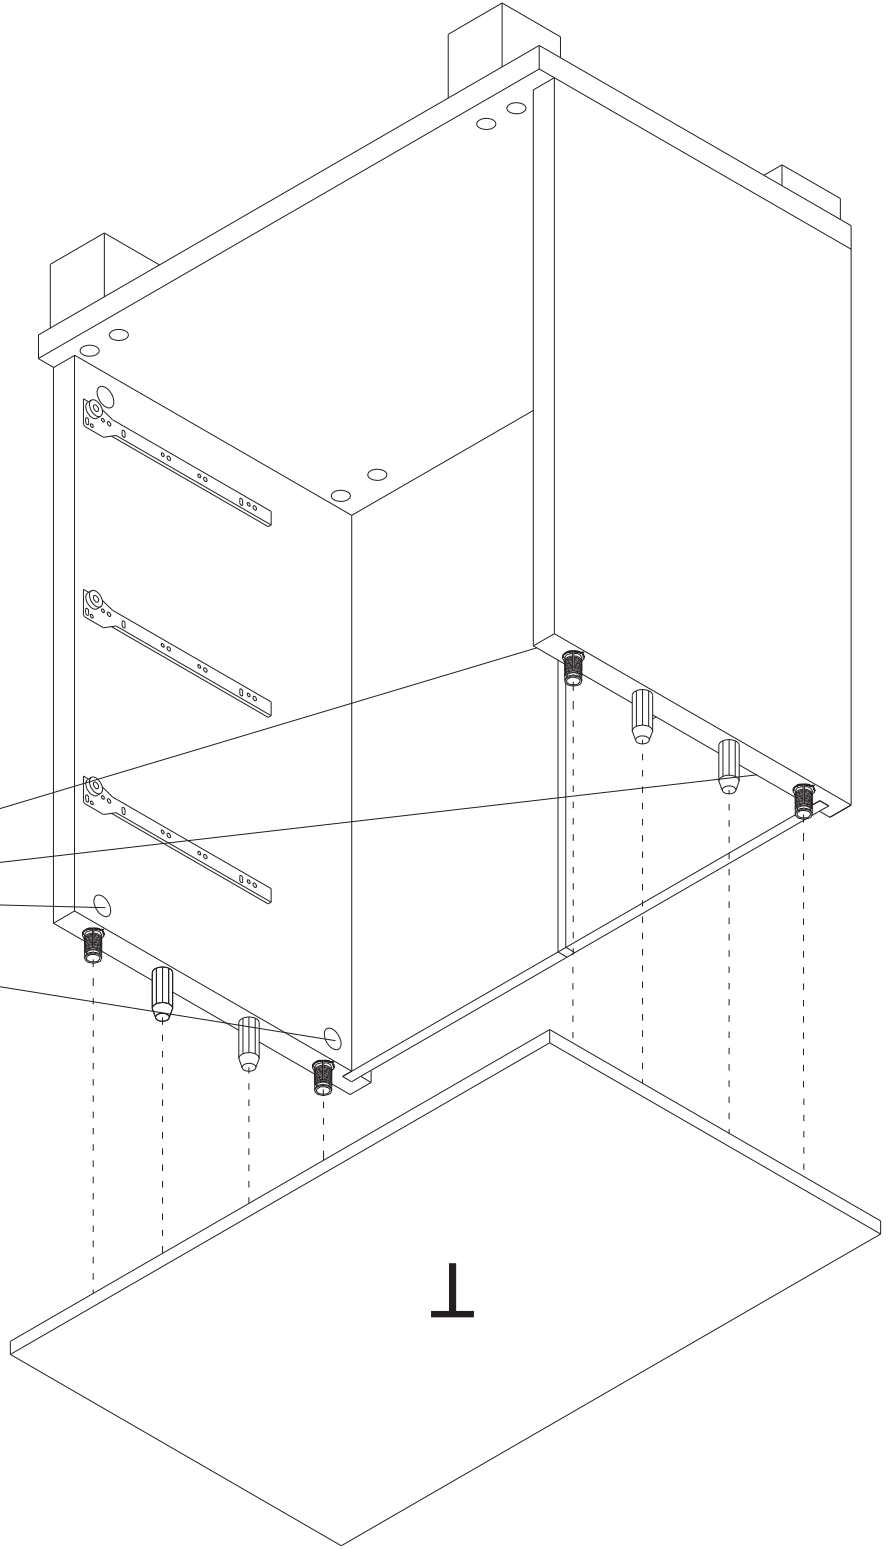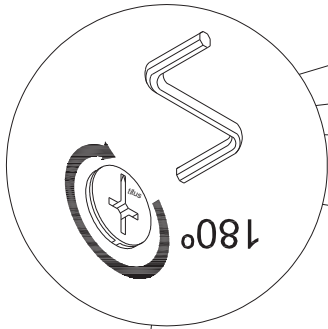

6

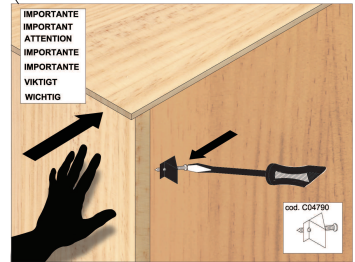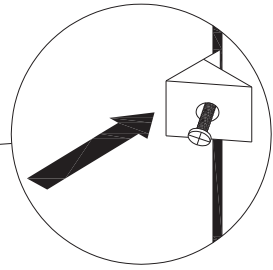
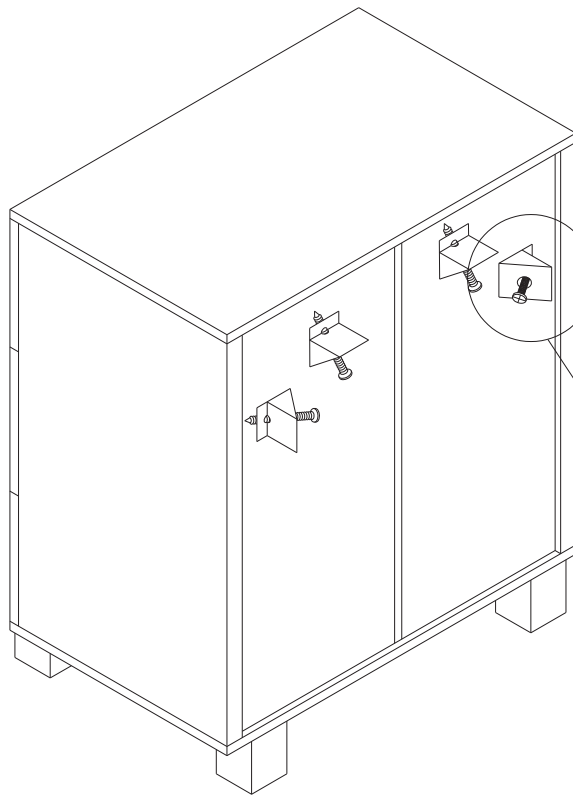


cod. C04790

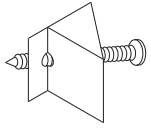


x4

7

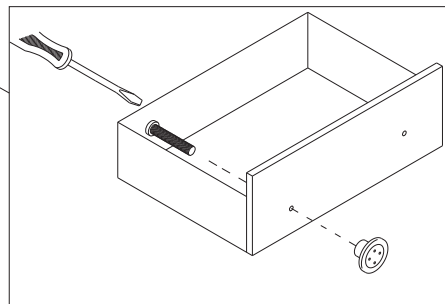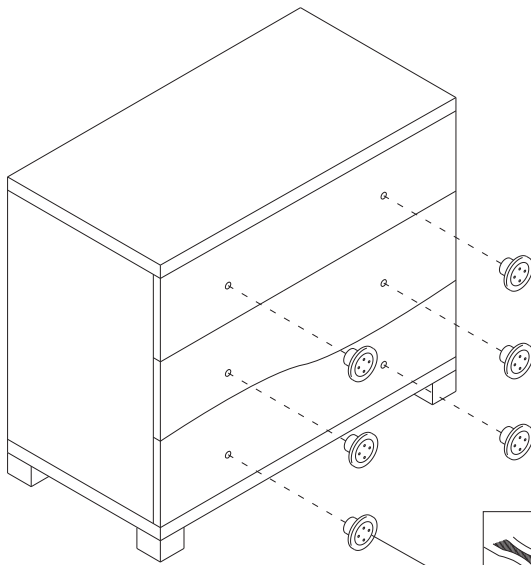

cod. C00192




x 6

C



x 6

cod. C00329



x 1

