

## MONTAJE DE CP-1434

ASSEMBLING OF THE CP-1434  
MONTAGEM DO CP-1434  
MONTERING AV CP-1434


МОHTAЖ CP-1434  
MONTAGE VON CP-1434  
MONTAGGIO DI CP-1434




X1




30  
min.



cod. C01528  
x 4

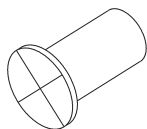


cod. C00140  
x 2



cod. C07670  
x 2



cod. C07679  
x 4

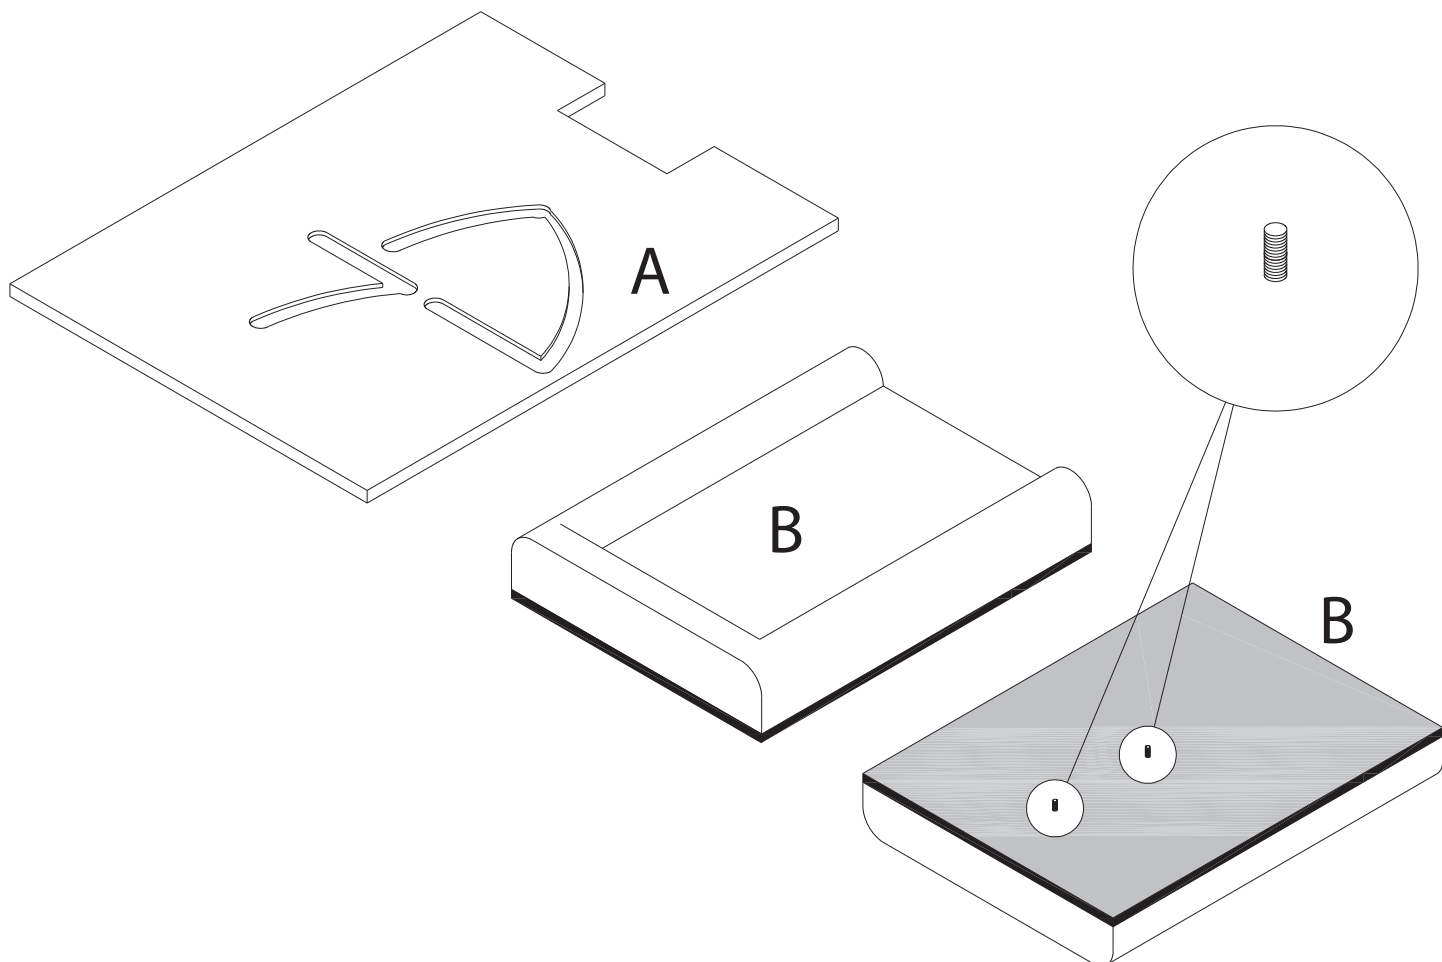


- E** IMPORTANTE: GUARDAR PARA FUTURAS CONSULTAS. LEER ATENTAMENTE.
- GB** IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.
- F** ATTENTION: GARDER POUR CONSULTER AU FUTUR.
- RU** ВАЖНО: ВНИМАТЕЛЬНО ИЗУЧИТЕ И СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ
- I** IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONI. TENERE PER FUTURE CONSULTAZIONE.

MICUNA S.L. PROL. C/ DE LA ALBUFERA, S/N. 46430 SOLLANA (VALENCIA)

APTO. 67






46460 SILLA (VALENCIA) <http://www.micuna.com>

1

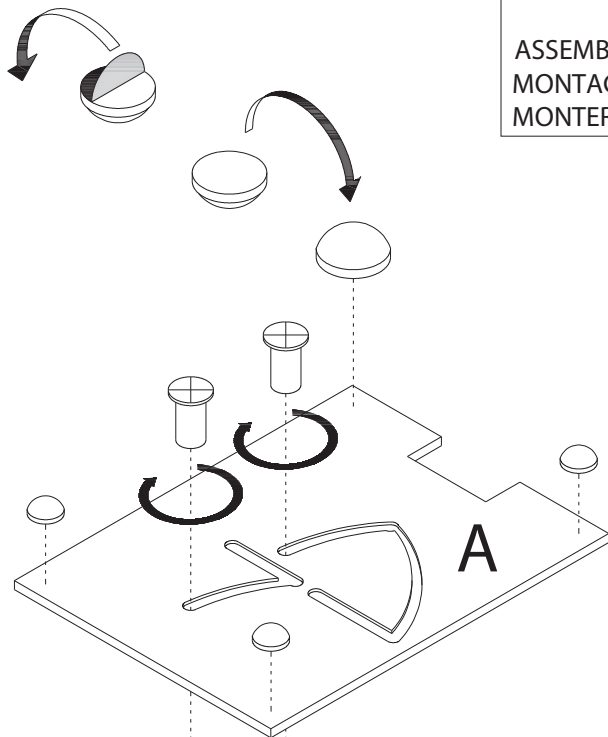

MONTAJE A  
ASSEMBLING A  
MONTAGEM A  
MONTERING A

MOHTAK A  
MONTAGE A  
MONTAGGIO A

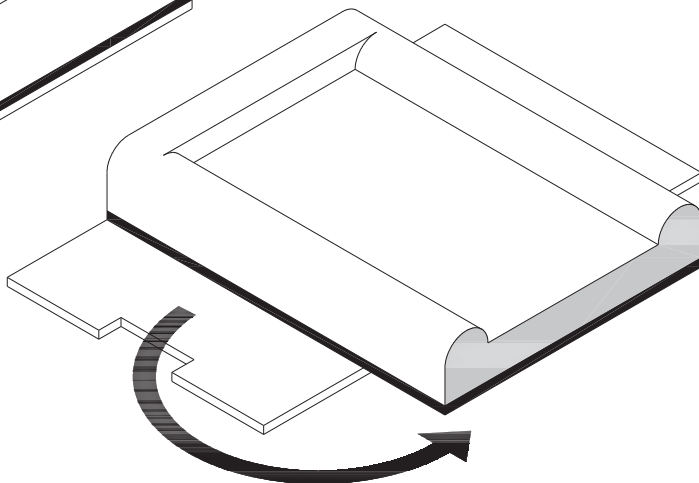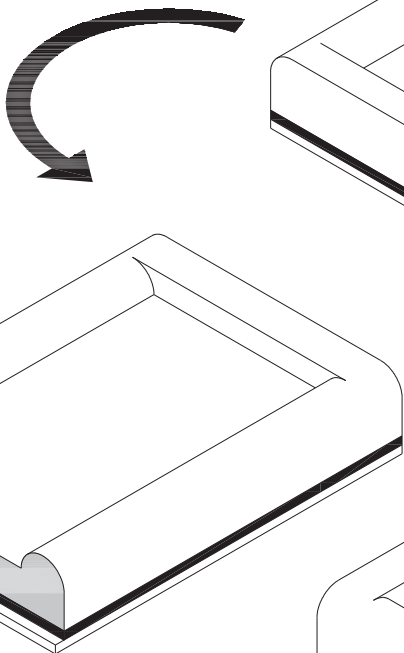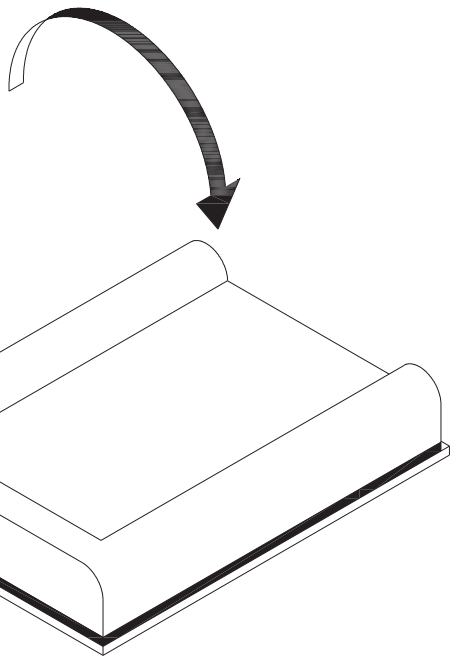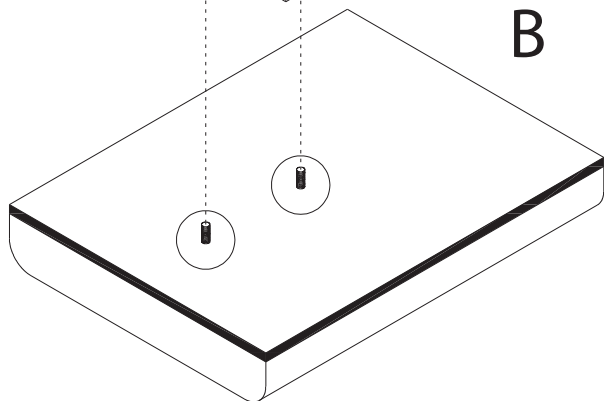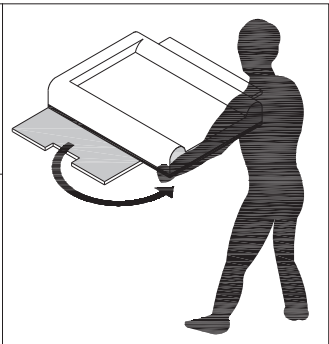

cod. C07679




x 4

cod. C00140



x 2




1


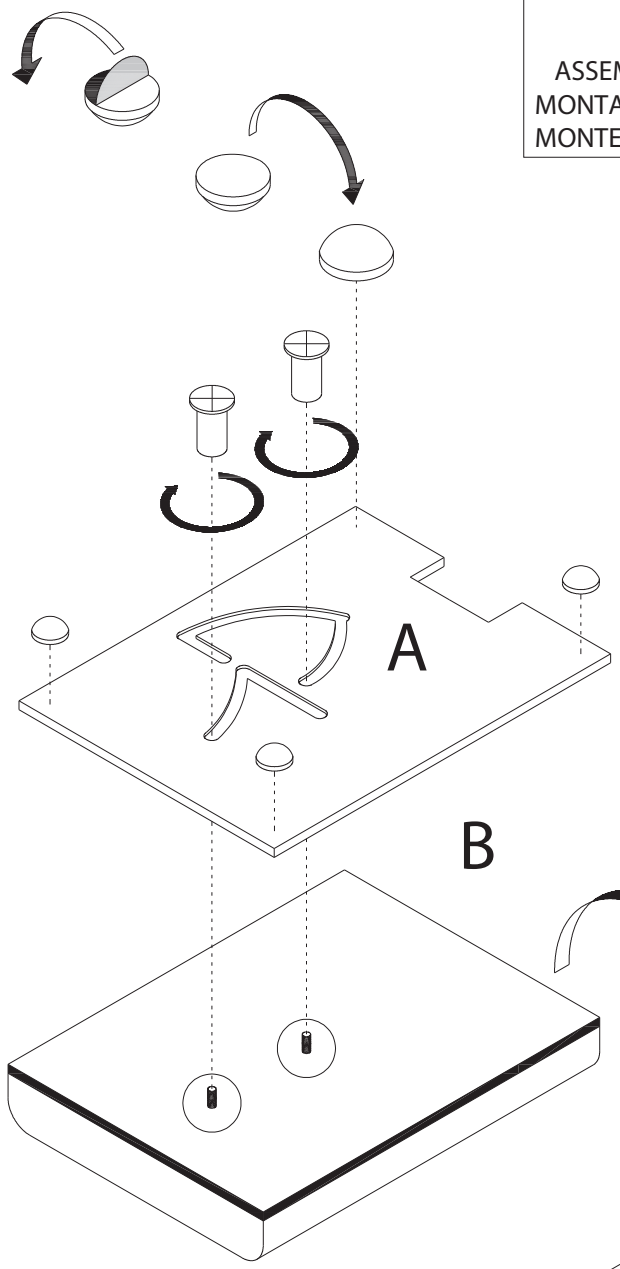


**MONTAJE B**





ASSEMBLING B  
 MONTAGEM B  
 MONTERING B

MOHTAK B  
 MONTAGE B  
 MONTAGGIO B

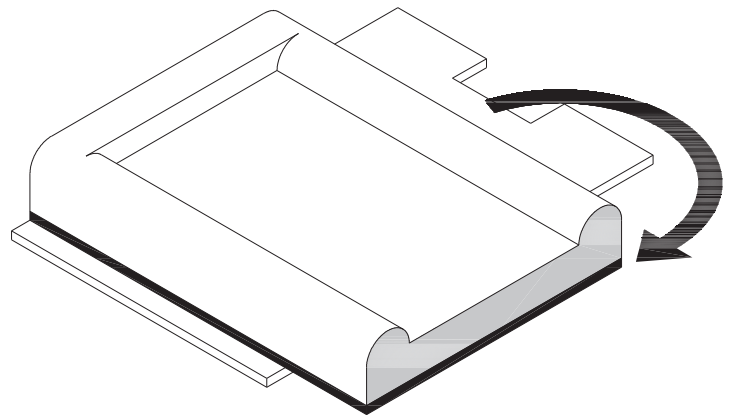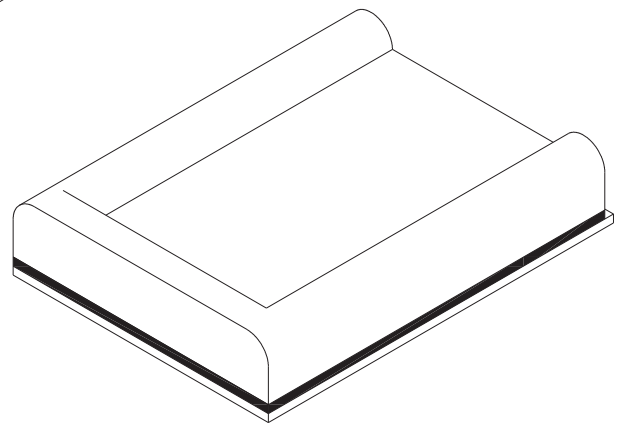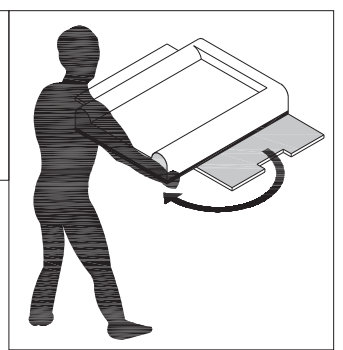

cod. C07679	cod. C00140
	
x 4	x 2

2

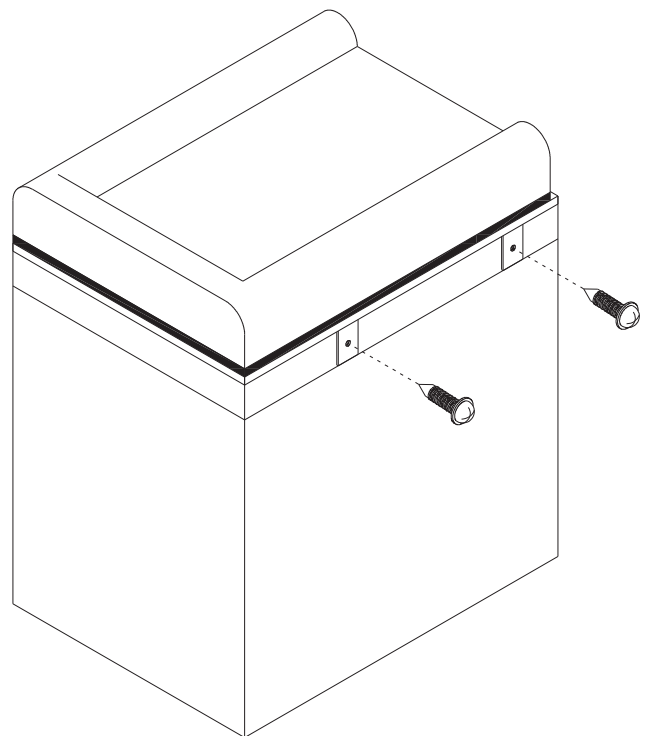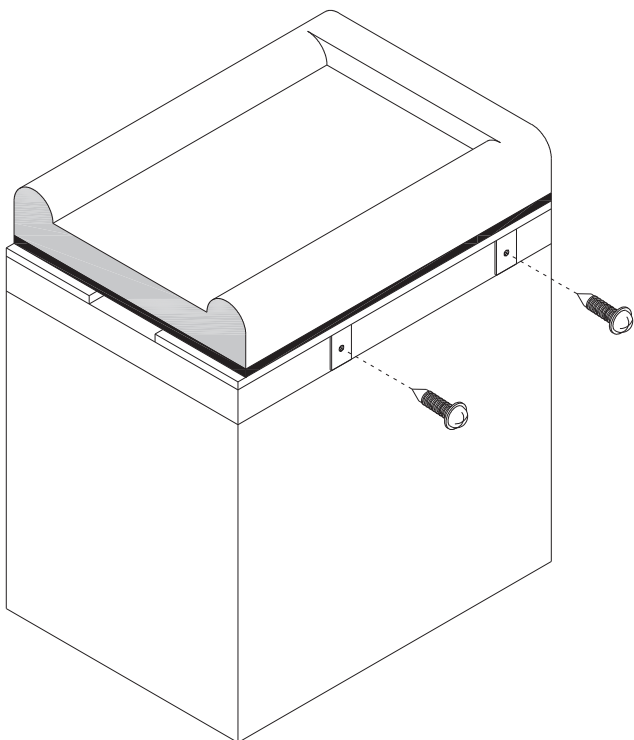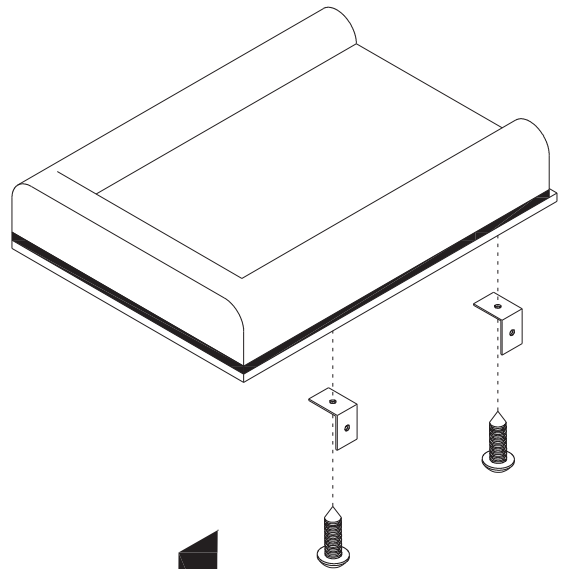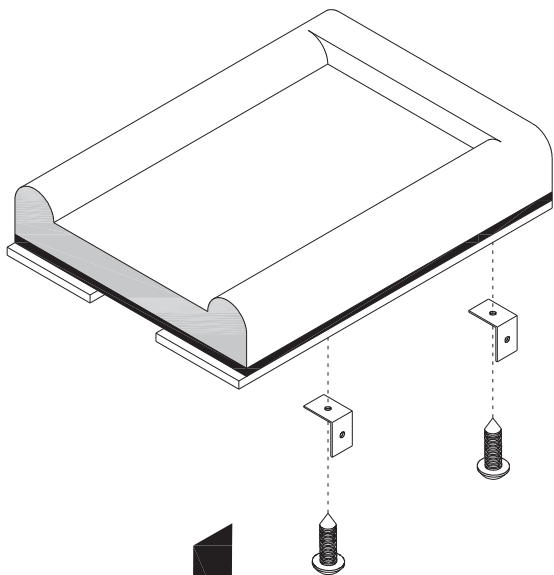


cod. C01528



x 4

cod. C07670



x 2